


Fuse/Relay Information

- Under-dash Fuse/Relay Box

Front View

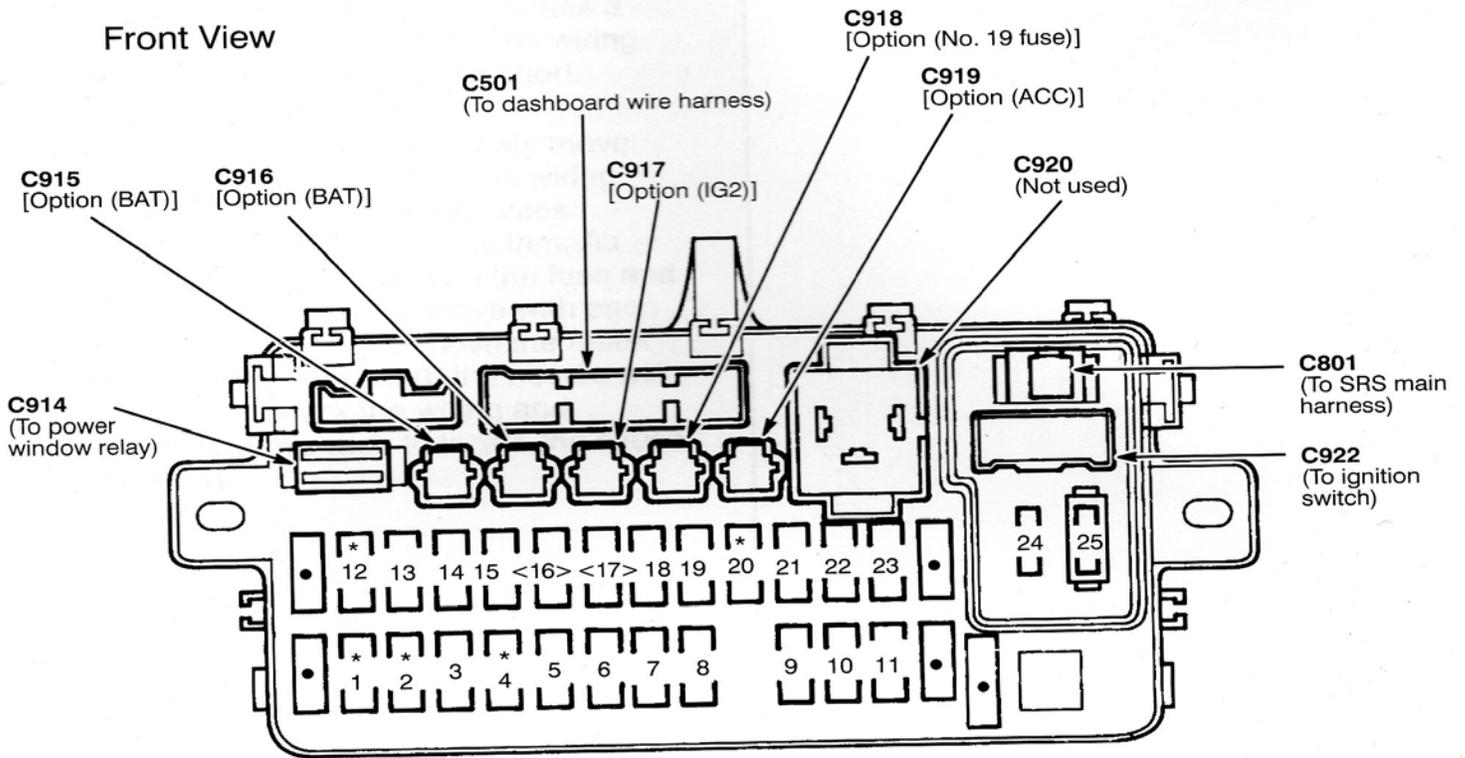


 
D : Spare fuse

* : Not used

<> : Canada

Rear View

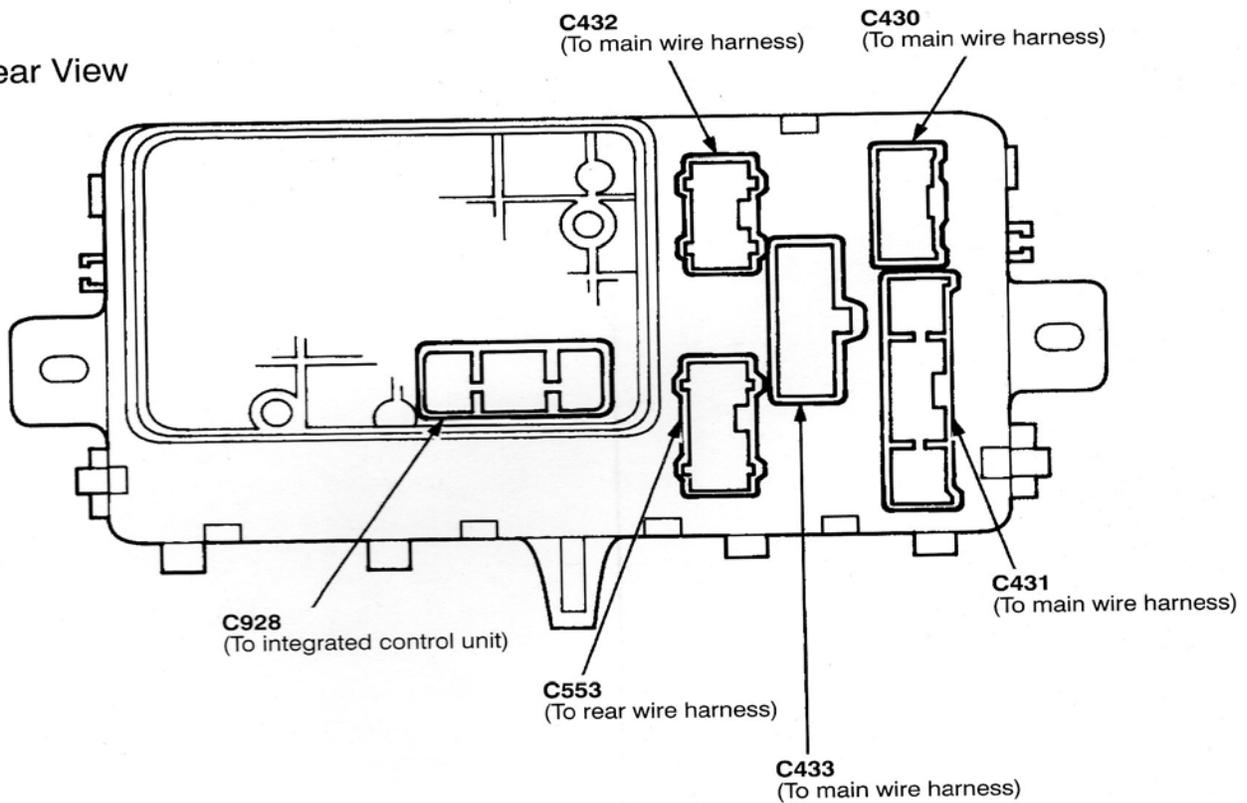



Fuse Number	Amps	Page	Component or Circuit Protected
1	—	—	Not used
2	—	—	Not used
3	7.5	10-2	Integrated control unit, Ceiling light, Trunk light, Data link connector (DLC)
4	—	—	Not used
5	20	120-1	Power window control unit
6	20	10-2	Power door lock control unit
7	20	120-1	Power window control unit
8	20	120-1	Power window control unit
9	10	100	Right headlight (high beam), Daytime running lights resistor (Canada)
10	10	100	Left headlight (high beam), High beam indicator light, Daytime running lights resistor (Canada)
11	10	10-2	Auxiliary light relay
12	—	—	Not used
13	7.5	10-3	Power mirrors, Air delivery, Blower controls, Rear window defogger, Fans, Compressor controls, Anti-lock brake system (ABS)
14	20	10-4	Integrated control unit, Power windows, Wiper/washer
15	10	10-4	Gauge assembly, Roof unlatched indicator system, Integrated control unit, A/T gear position indicator, Turn signal lights, Interlock system, Back-up lights, Power windows
16	7.5	10-3	Daytime running lights control unit (Canada), Option connector C
17	10	10-8	Daytime running lights control unit (Canada), Option connector B
18	7.5	21, 21-1	PGM-FI main relay, Engine control module (ECM), Integrated control unit
19	10	100-1	Dash lights, Parking lights, Taillights, License lights, Console lights, Option connector D
20	—	—	Not used
21	10	100	Right headlight (low beam), Auxiliary light switch

(cont'd)

Fuse/Relay Information


- Under-dash Fuse/Relay Box (cont'd)

Fuse Number	Amps	Page	Component or Circuit Protected
22	10	100	Left headlight (low beam)
23	15	10-6	Stereo radio/cassette player, Cigarette lighter, Option connector E
24	15	10-6	Gauge assembly, Cruise control, Vehicle speed sensor (VSS), PGM-FI main relay, SRS unit, Charging system
25	10	10-6	SRS unit


Fuse/Relay Information (cont'd)


- Under-hood Fuse/Relay Box

Front View

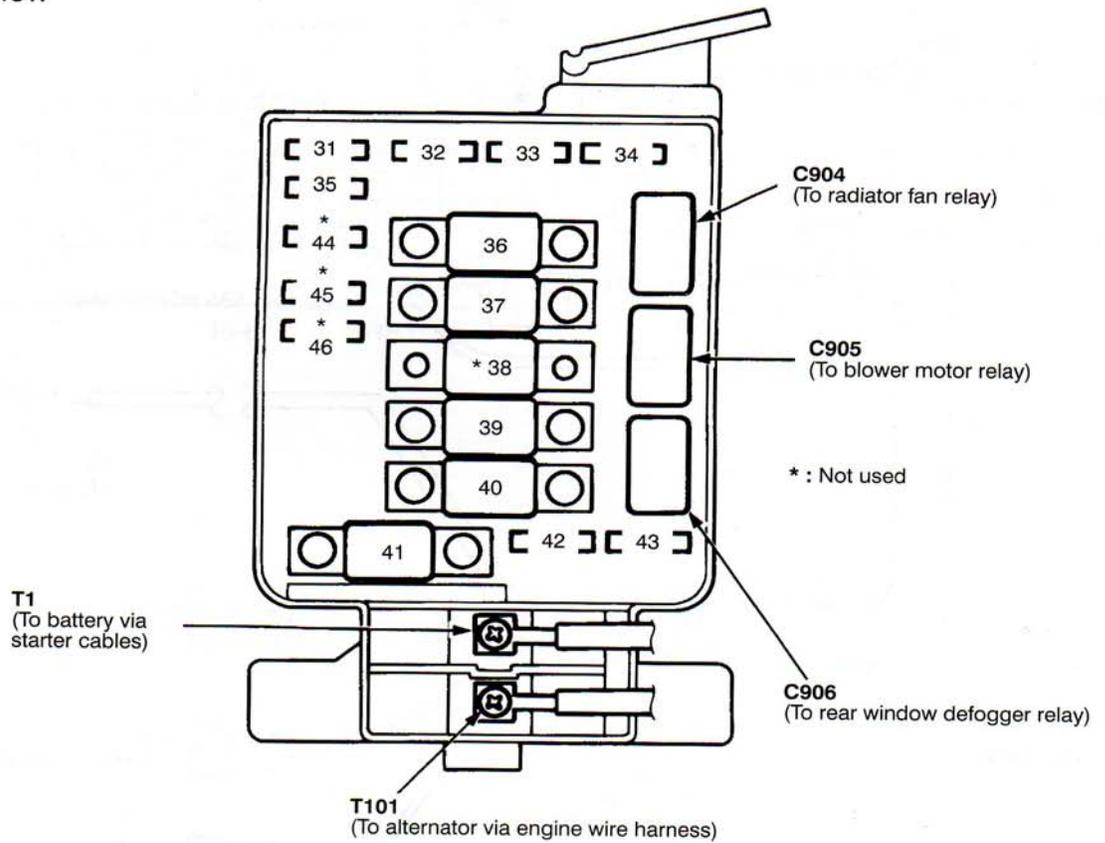

Rear View

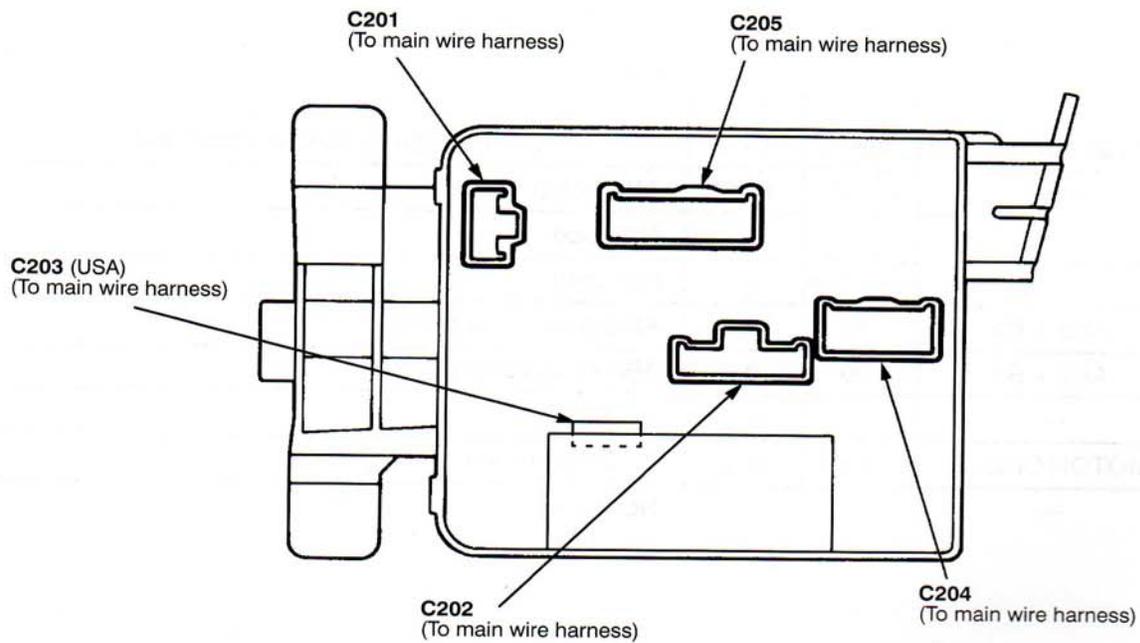


 


Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
31	ECU	15	10-7	PGM-FI main relay
32	BACK UP	7.5	10-7	Engine control module (ECM), Clock, Stereo radio/cassette player
33	COOLING FAN	15	10	Radiator fan relay
34	RR DEFROSTER	15	10	Rear window defogger
35	CONDENSER FAN	20	10-7	Condenser fan motor, A/C compressor clutch
36	OPTION	50	10-1	Power distribution to fuses 3 and 11, Power windows, Option connector A
37	HEATER MOTOR	30	10-1	Blower motor
38	—	—	—	Not used
39	IG	50	10	Ignition switch (BAT)
40	LIGHT	40	10-8	Combination light switch, Fuse 17
41	BATTERY	80	10	Power distribution (main fuse)
42	STOP, HORN	15	10-8	Horns, Brake lights, Key interlock solenoid
43	HAZARD	10	10-8	Turn signal lights, Hazard warning lights
44	—	—	—	Not used
45	—	—	—	Not used
46	—	—	—	Not used




Power Distribution

 - From Battery to Ignition Switch, Fuses, and Relays

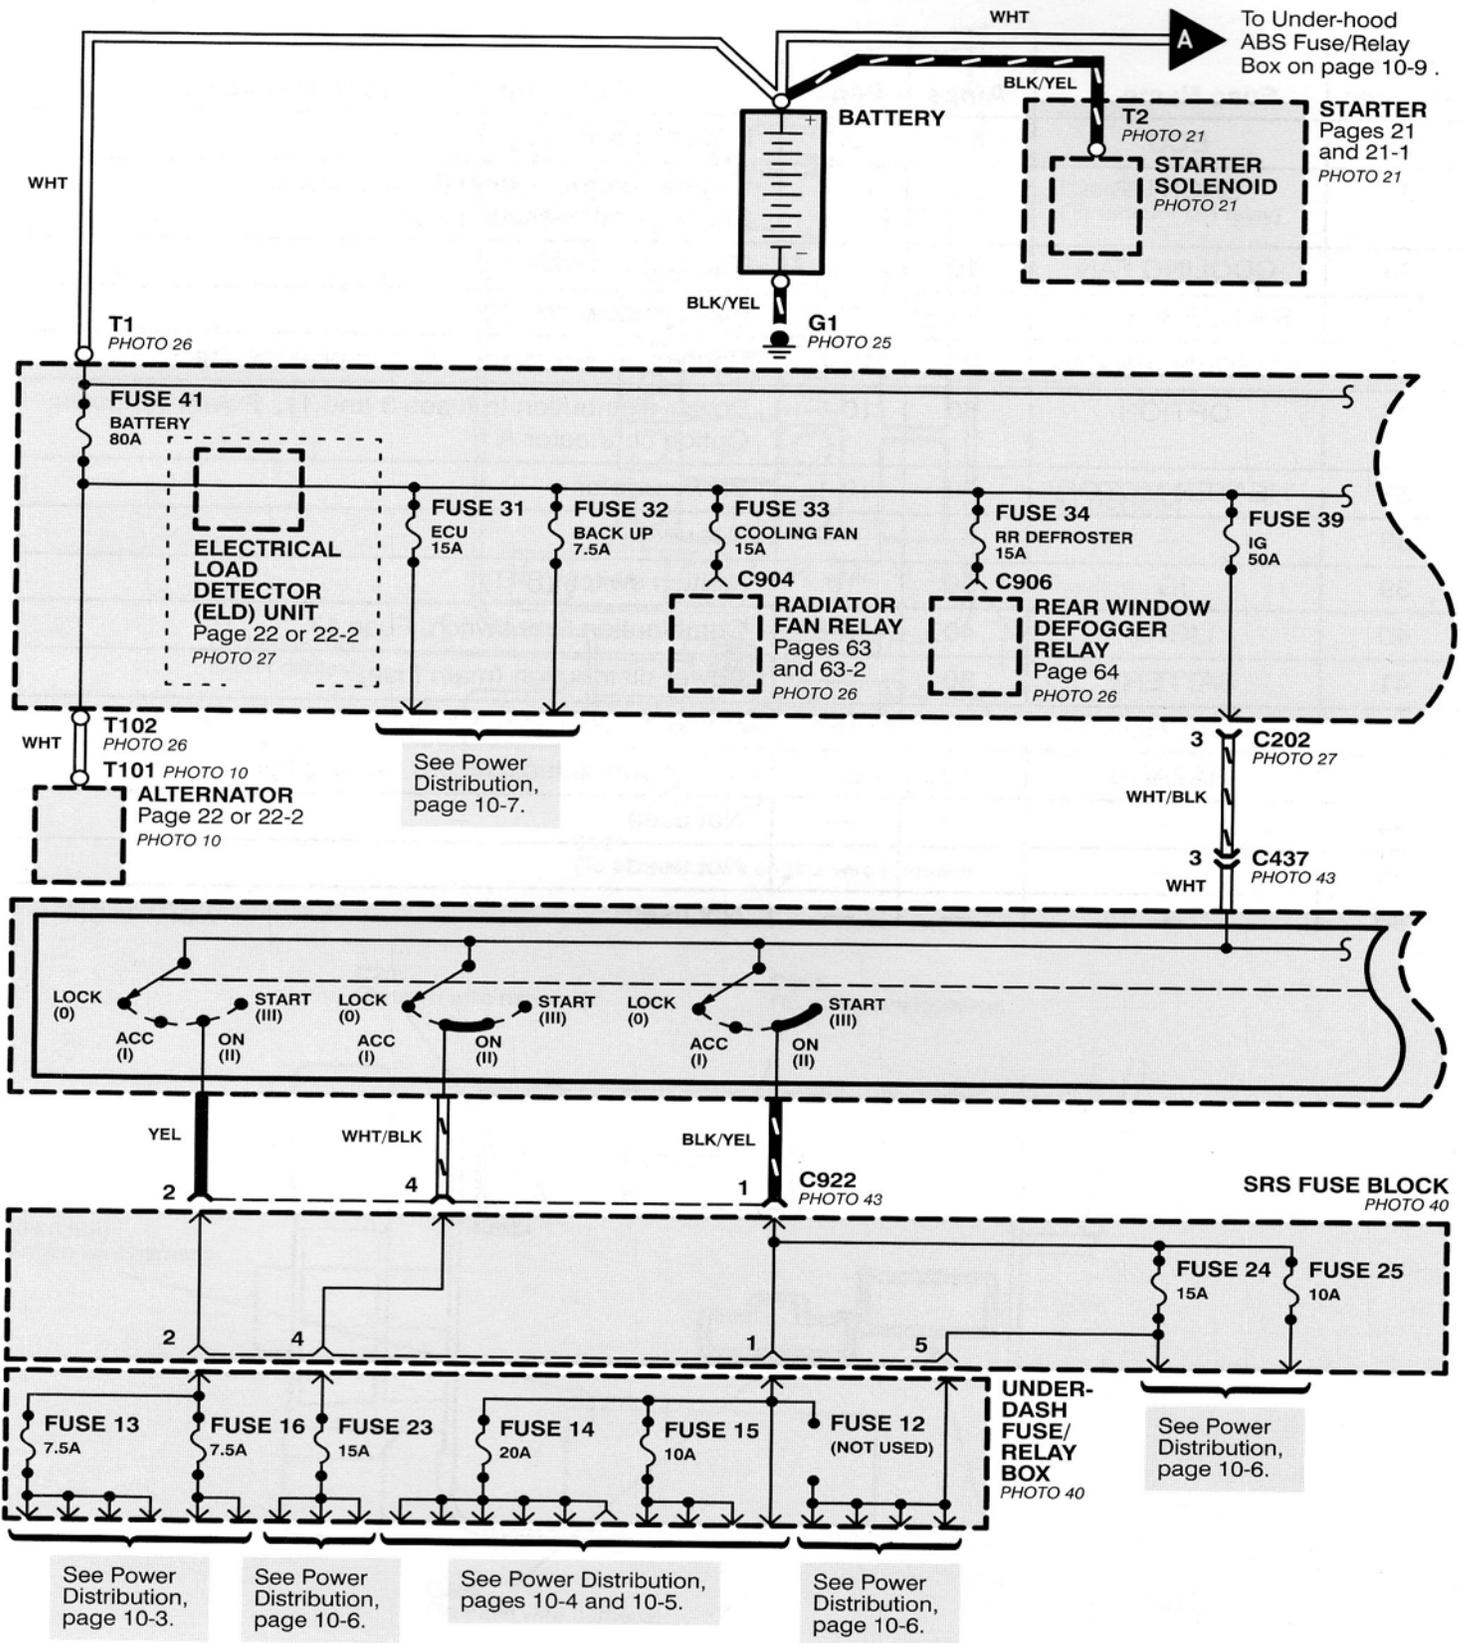




UNDER-HOOD FUSE/RELAY BOX
PHOTO 25

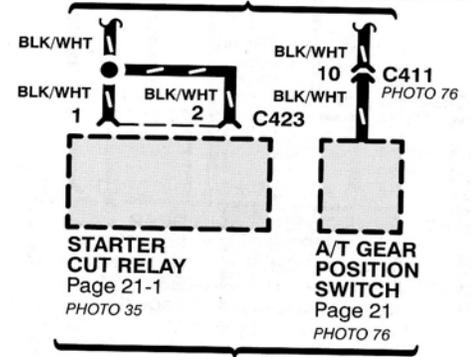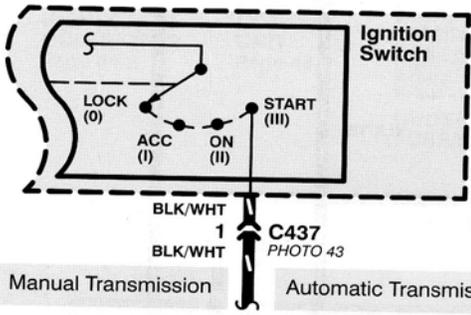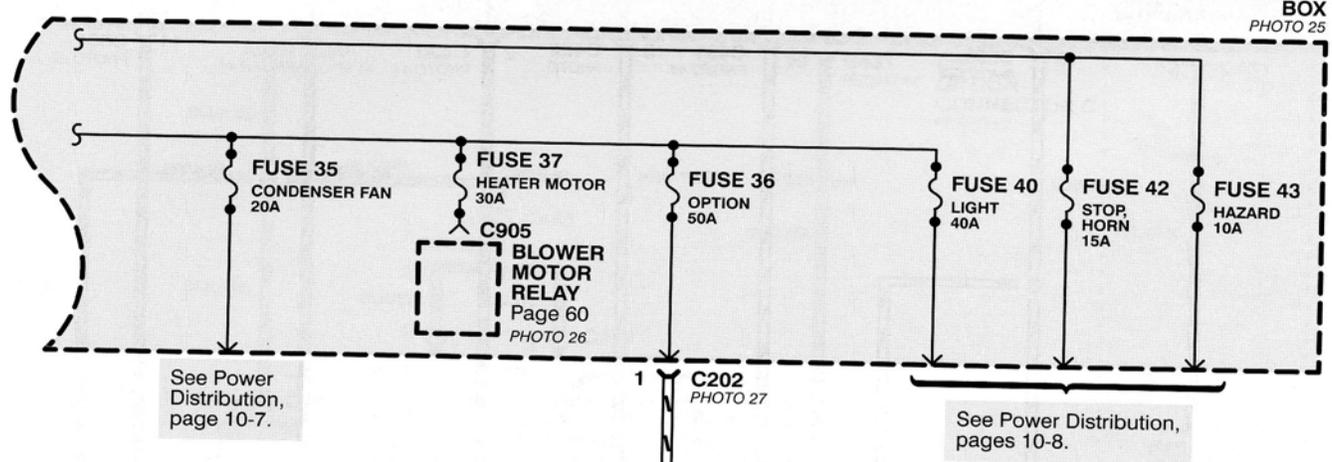


To fuse 18, for details see Starting System, pages 21 and 21-1.

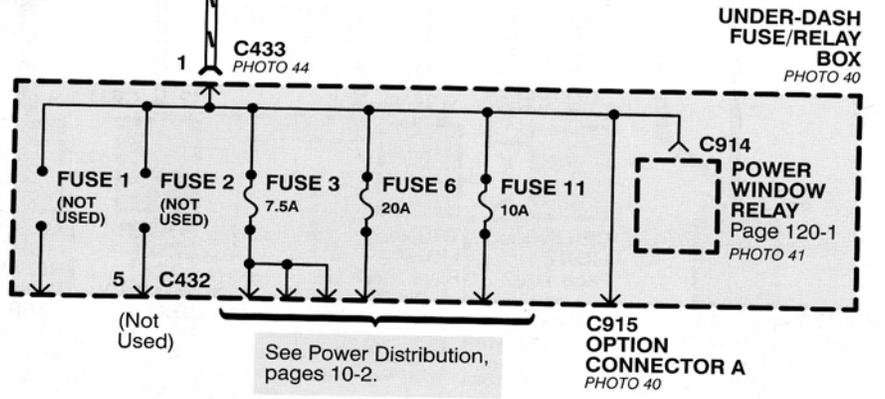


Power Distribution



- From Fuses to Relays and Components


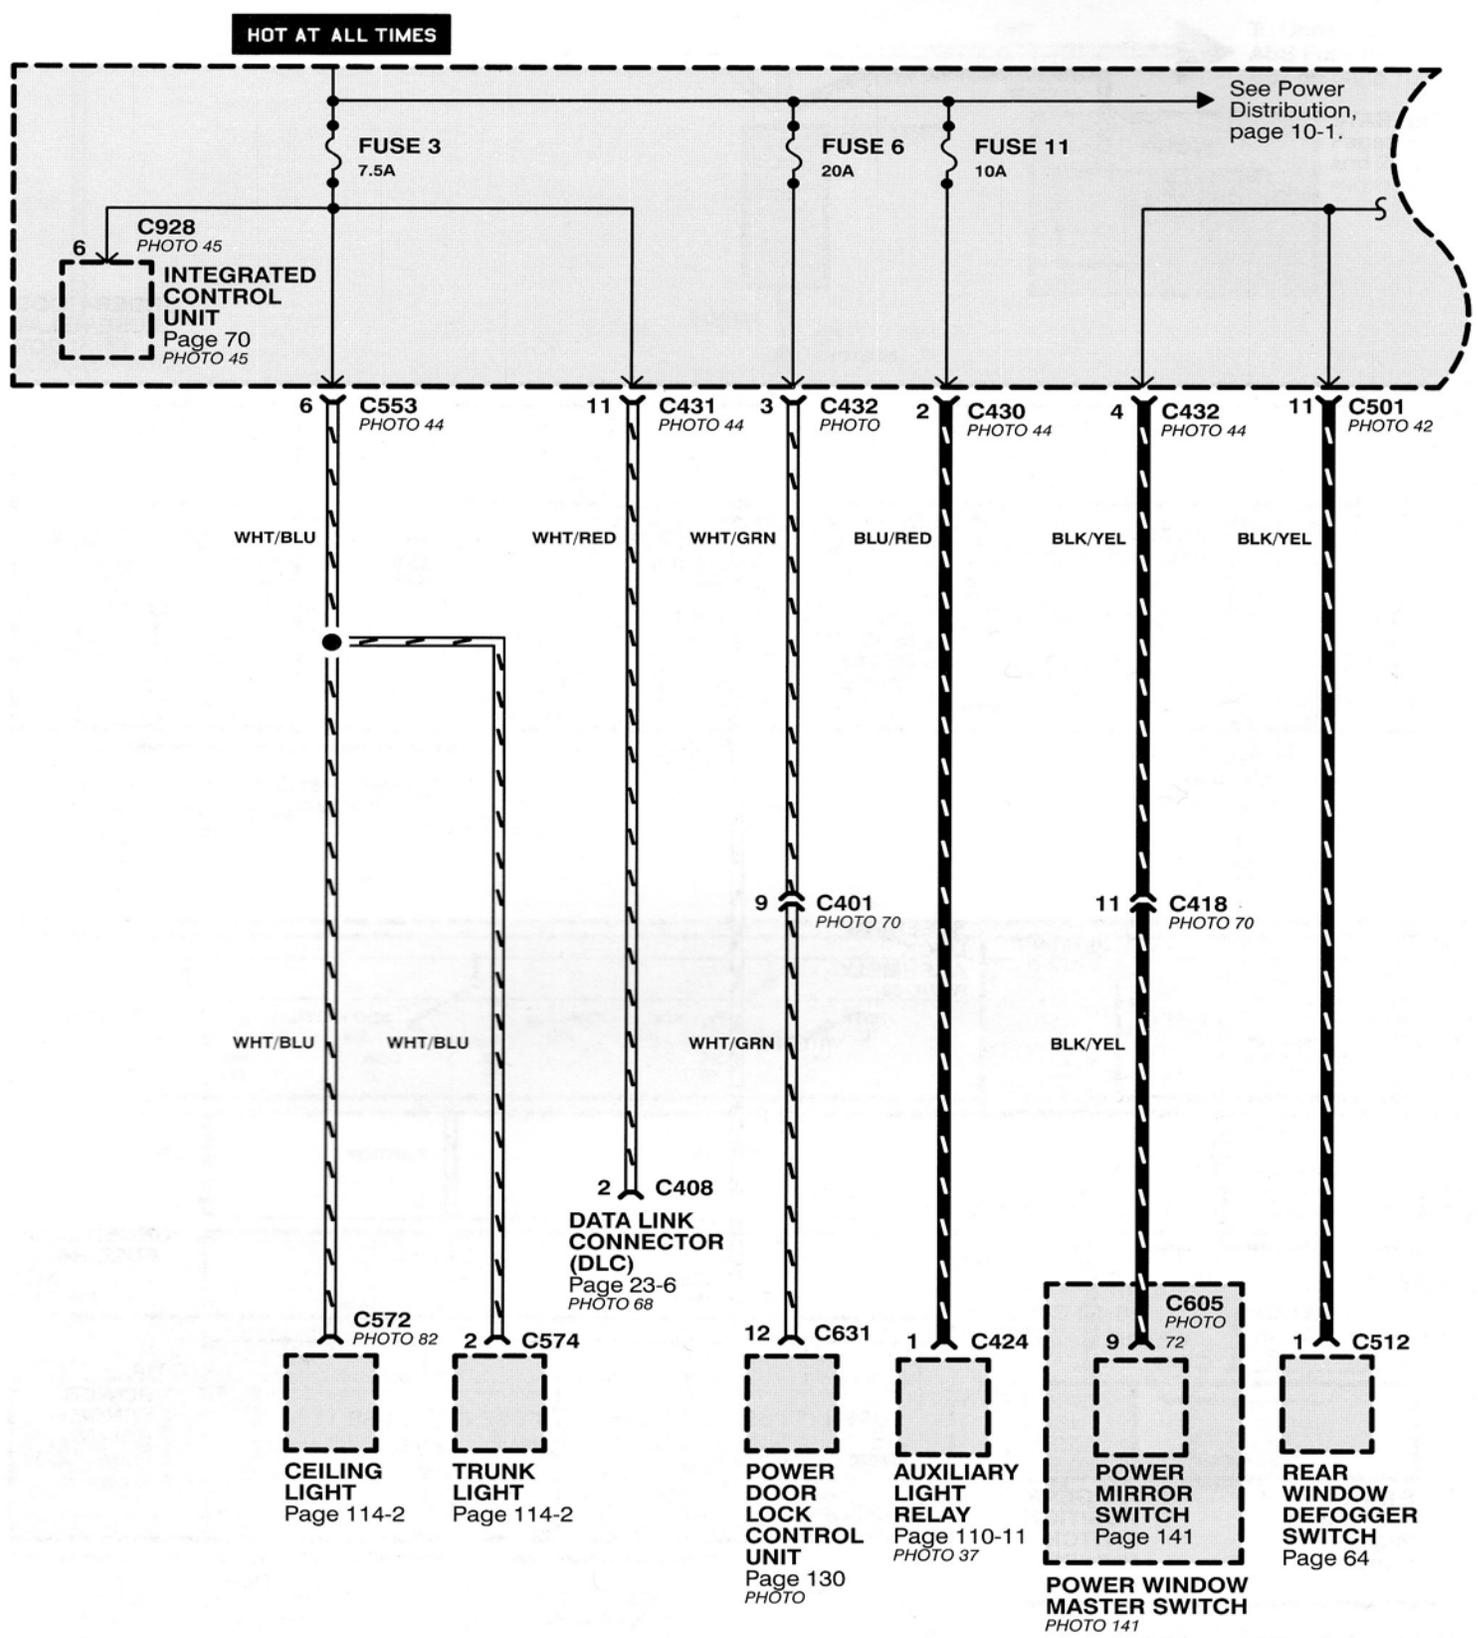


Power Distribution

  - From Fuses to Relays and Components (cont'd)

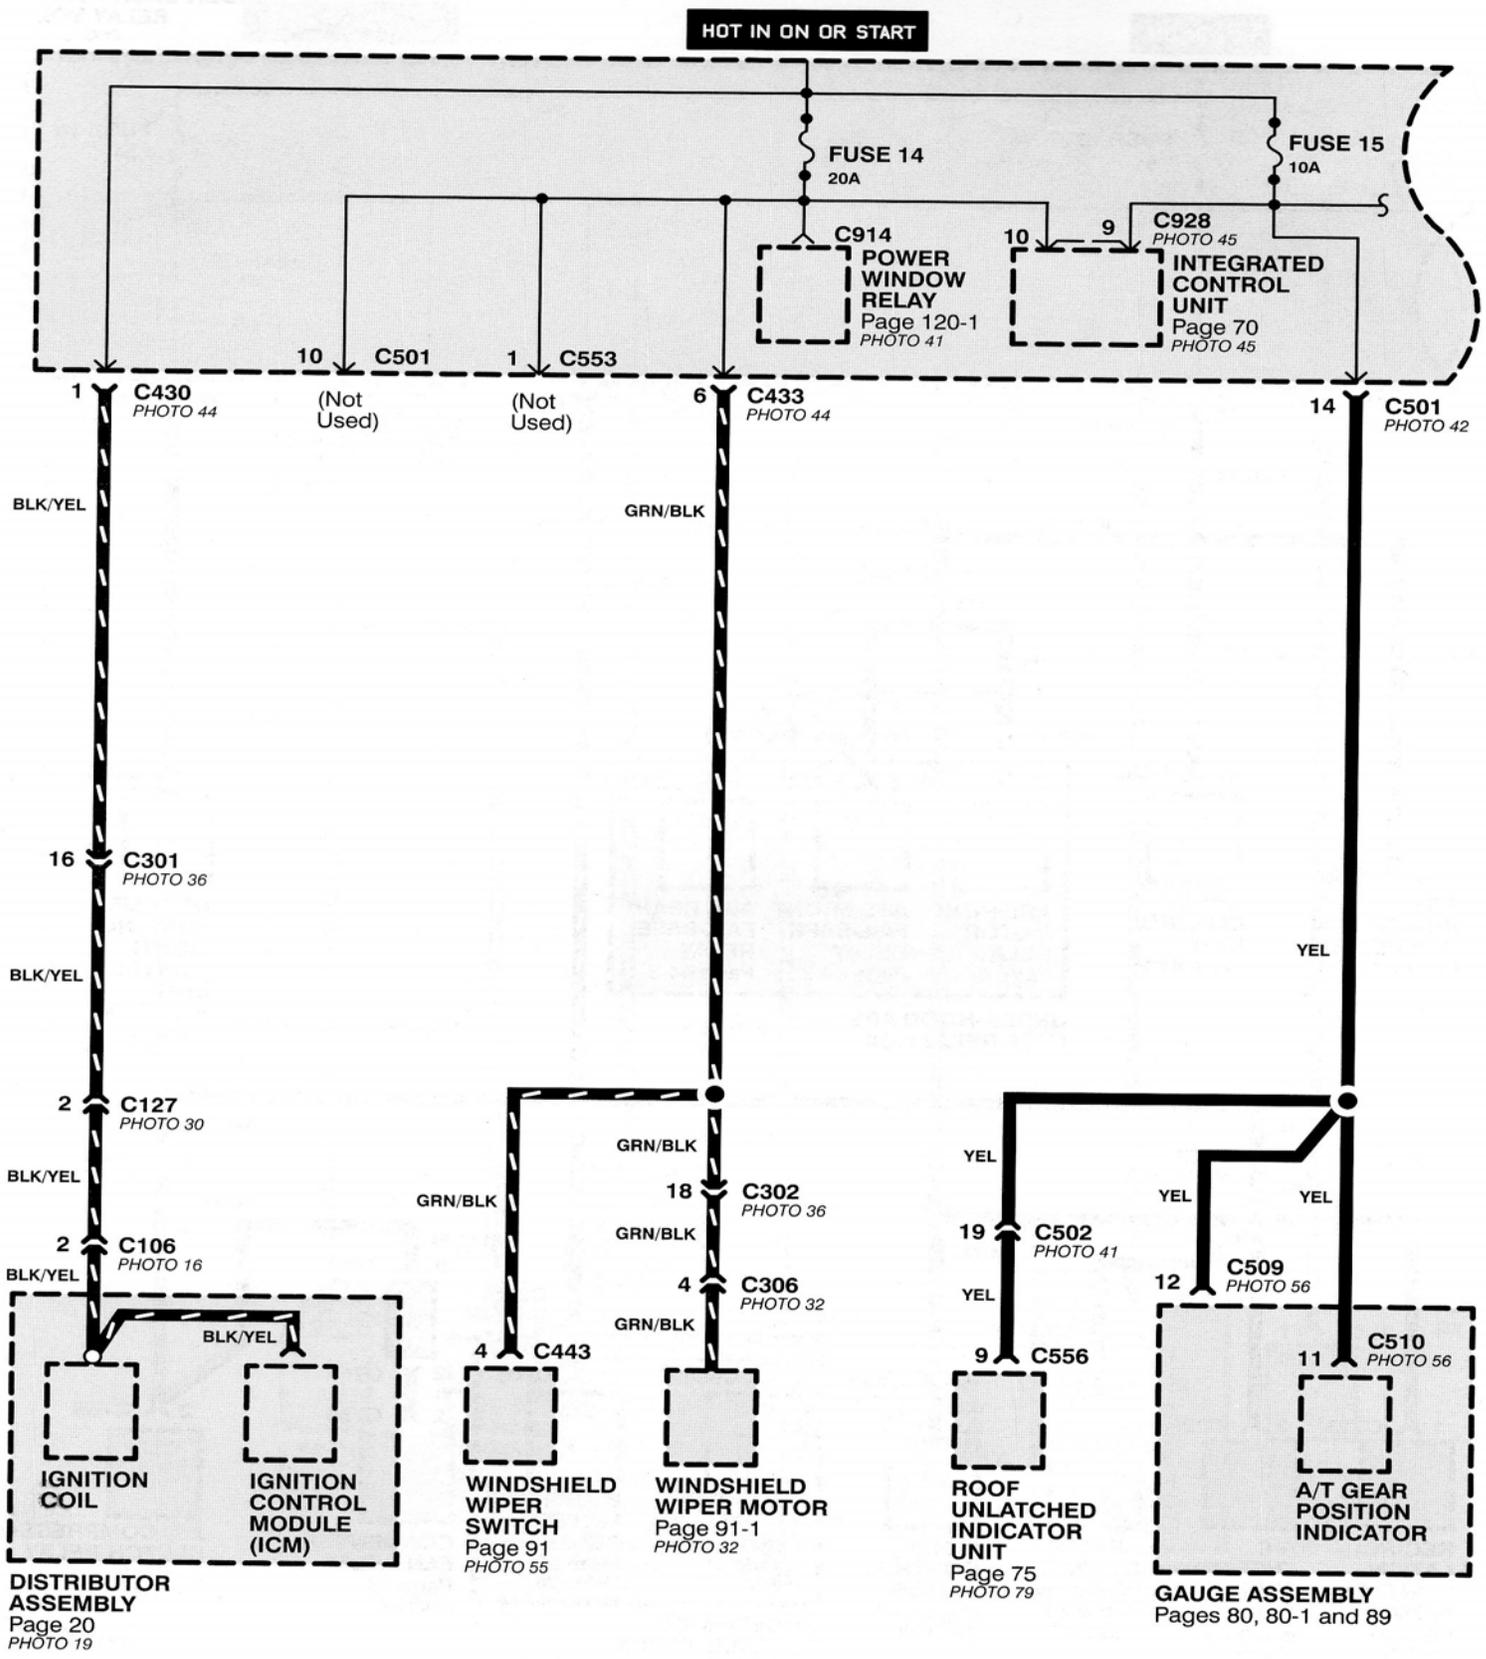

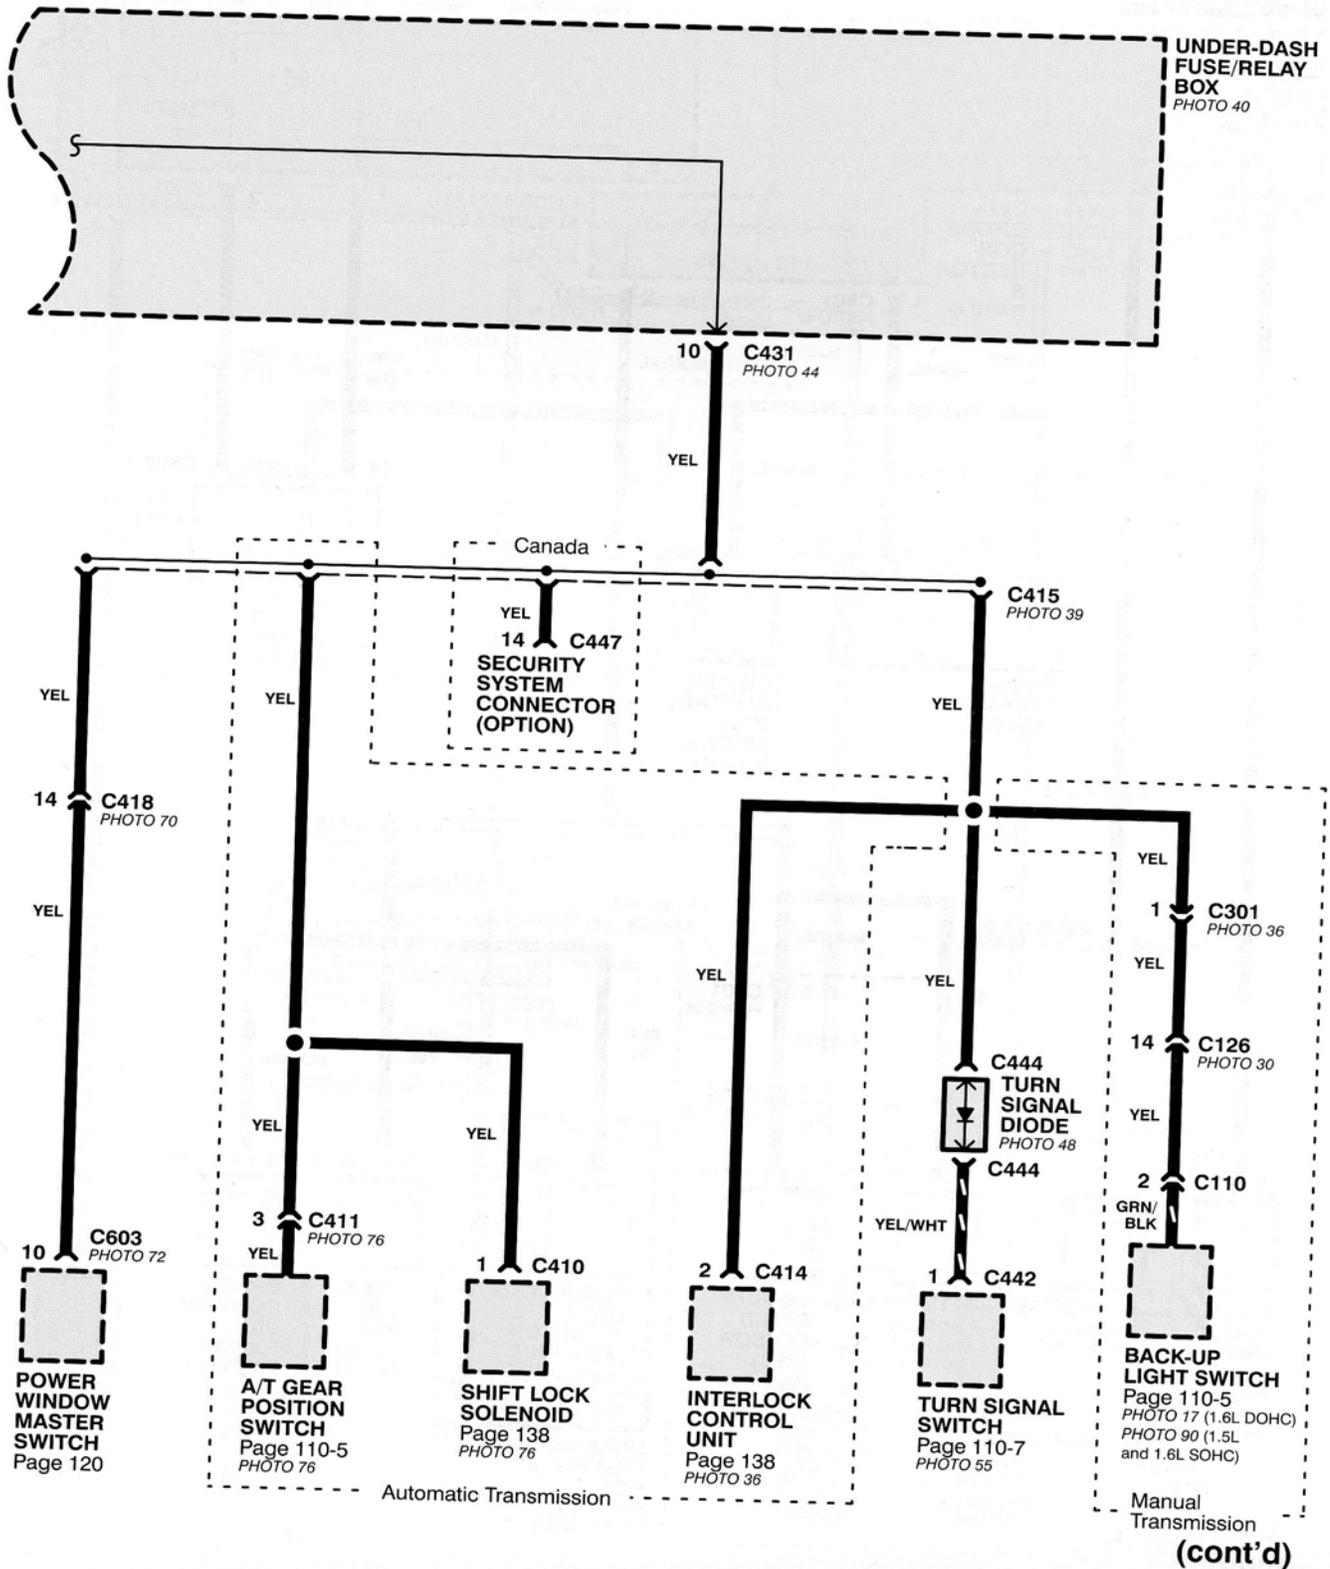


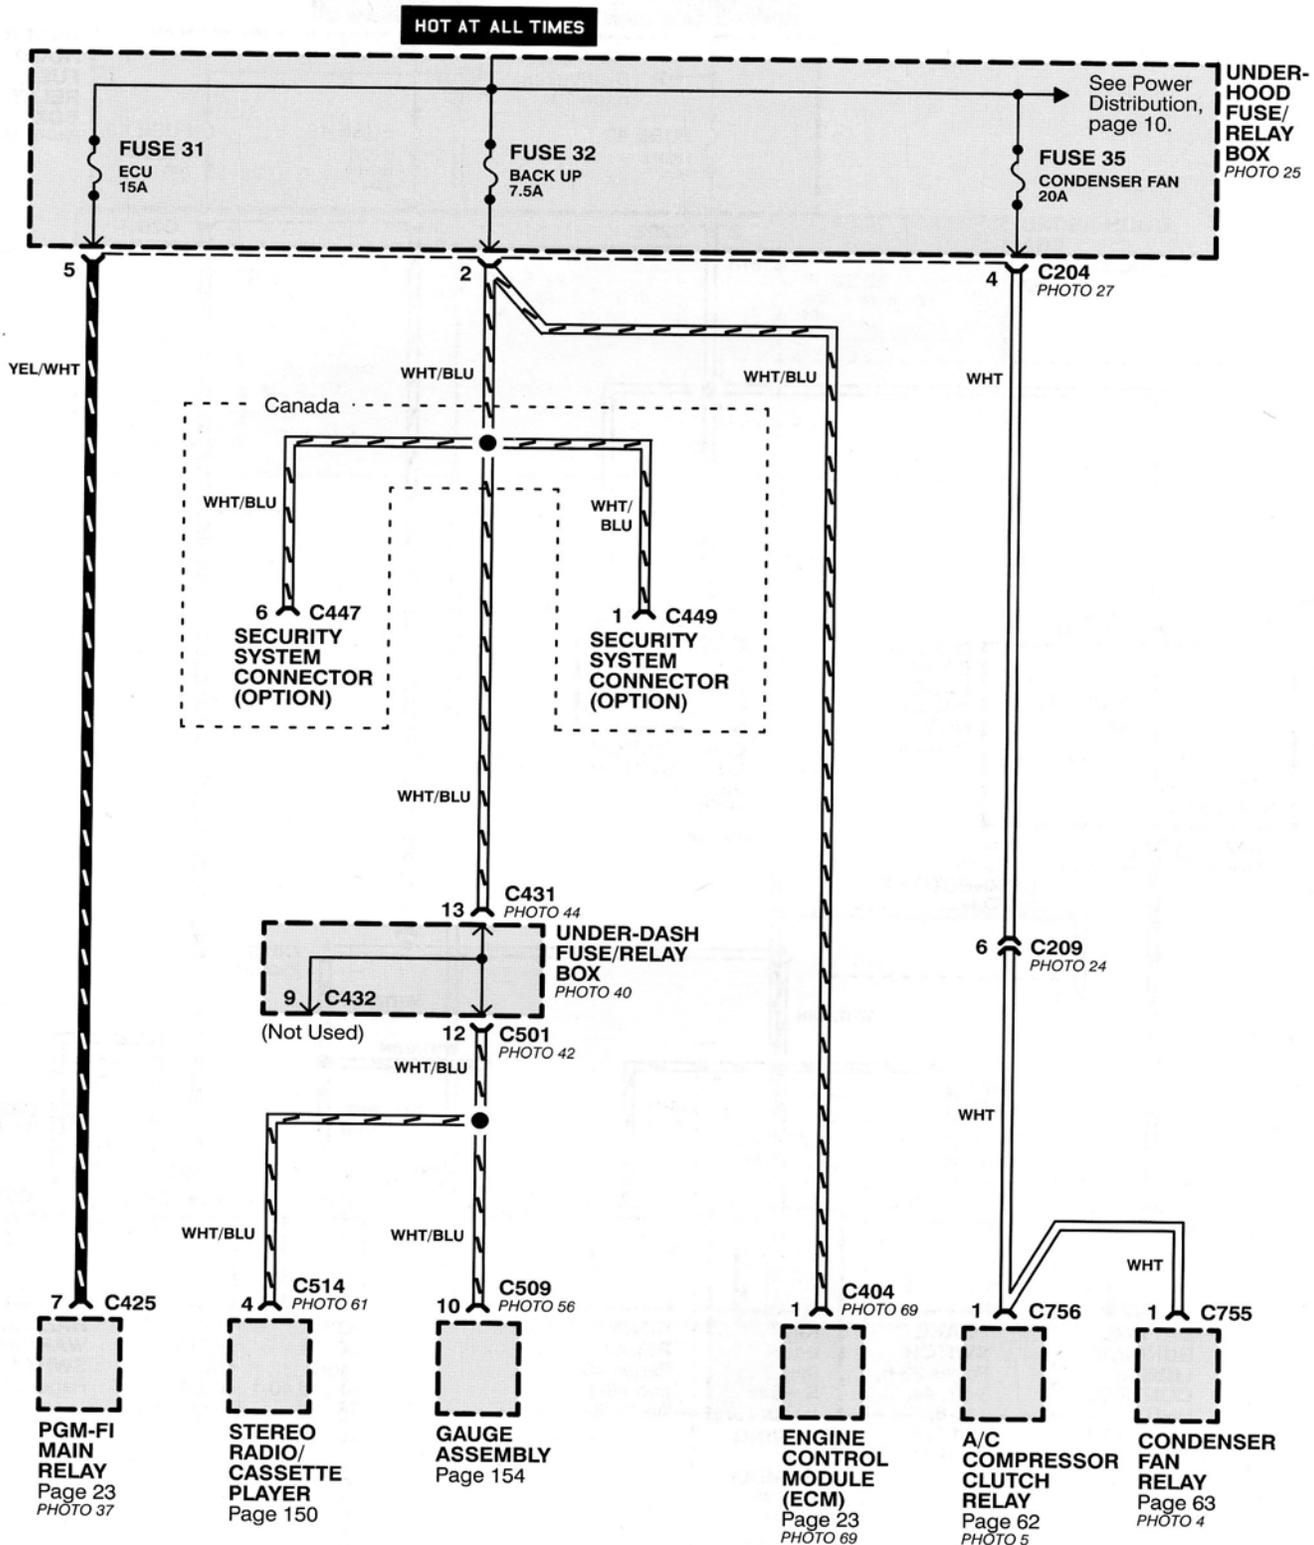



(cont'd)

Power Distribution

 - From Fuses to Relays and Components (cont'd)

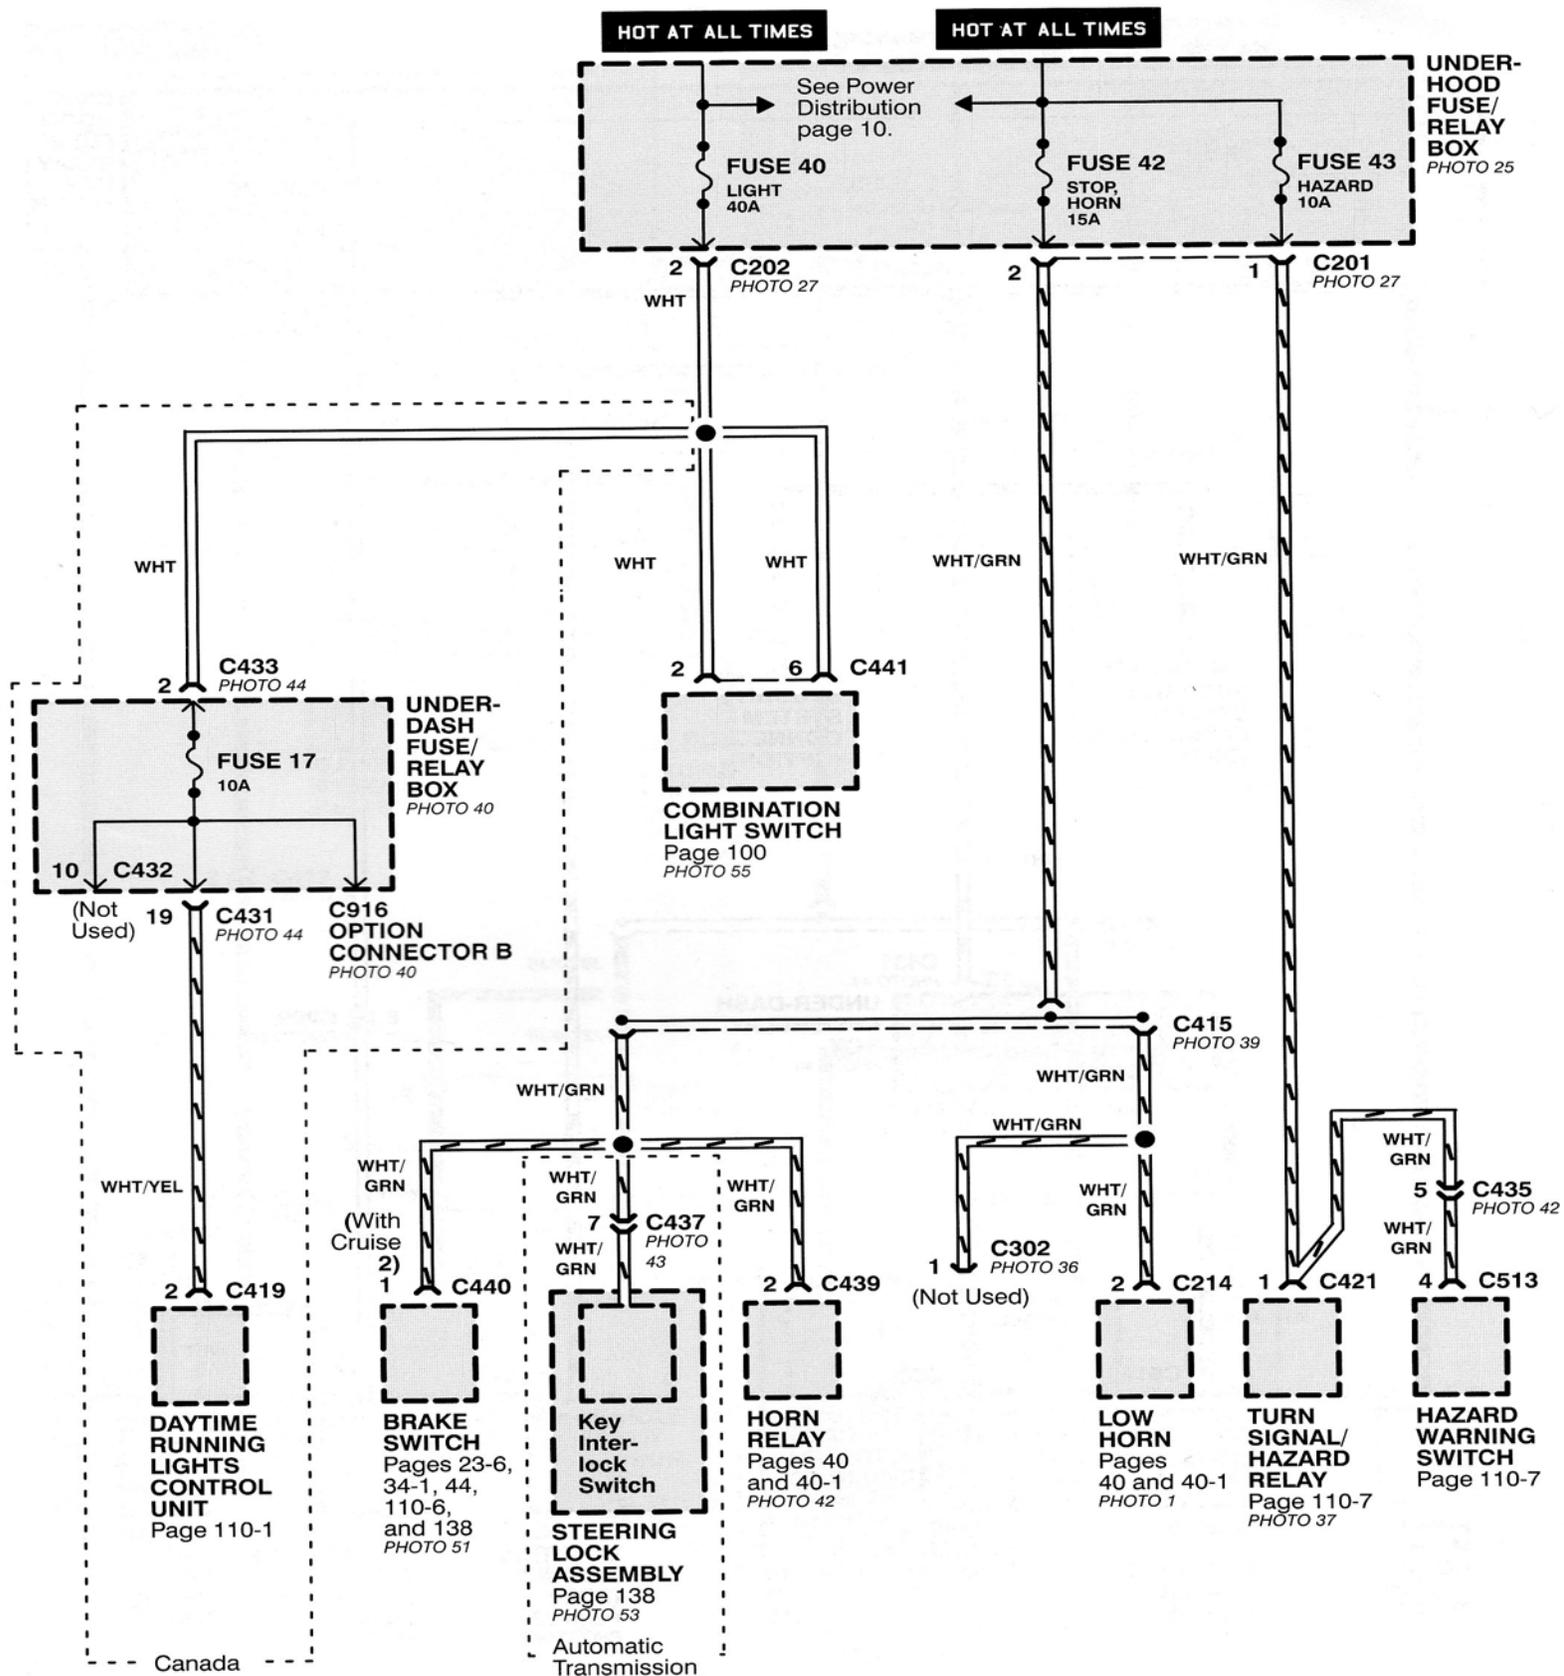


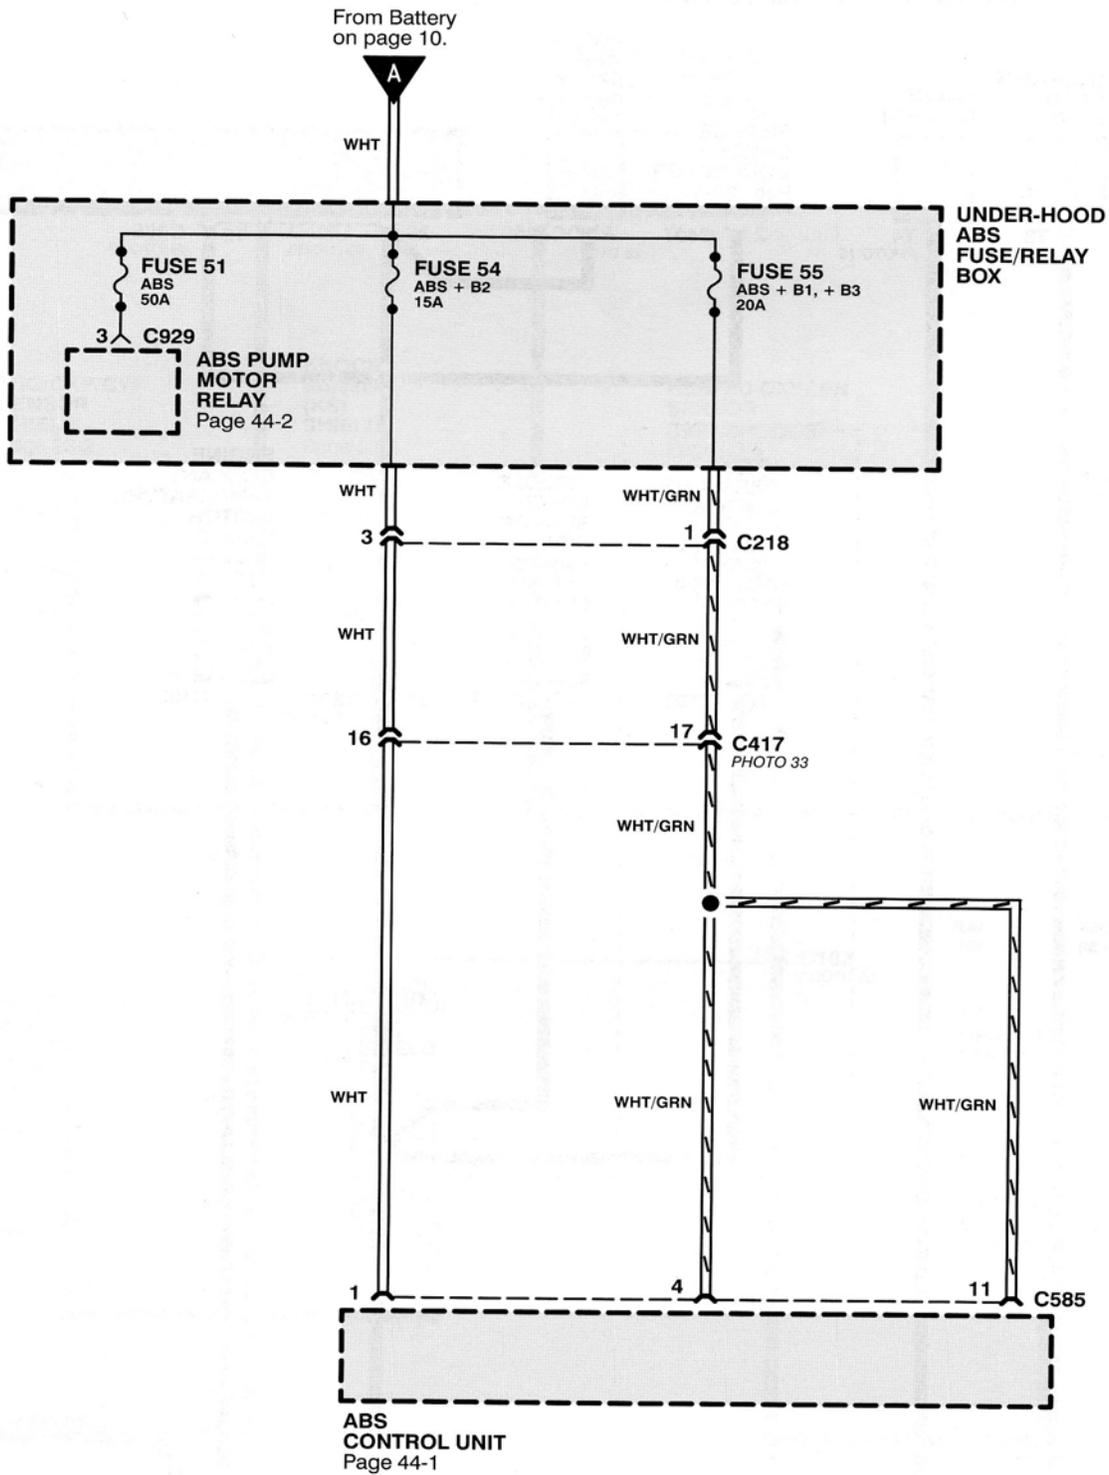


Ground Distribution

- G1, G2, G3, and G101

 
NOTE: Wires shown without color codes are black.

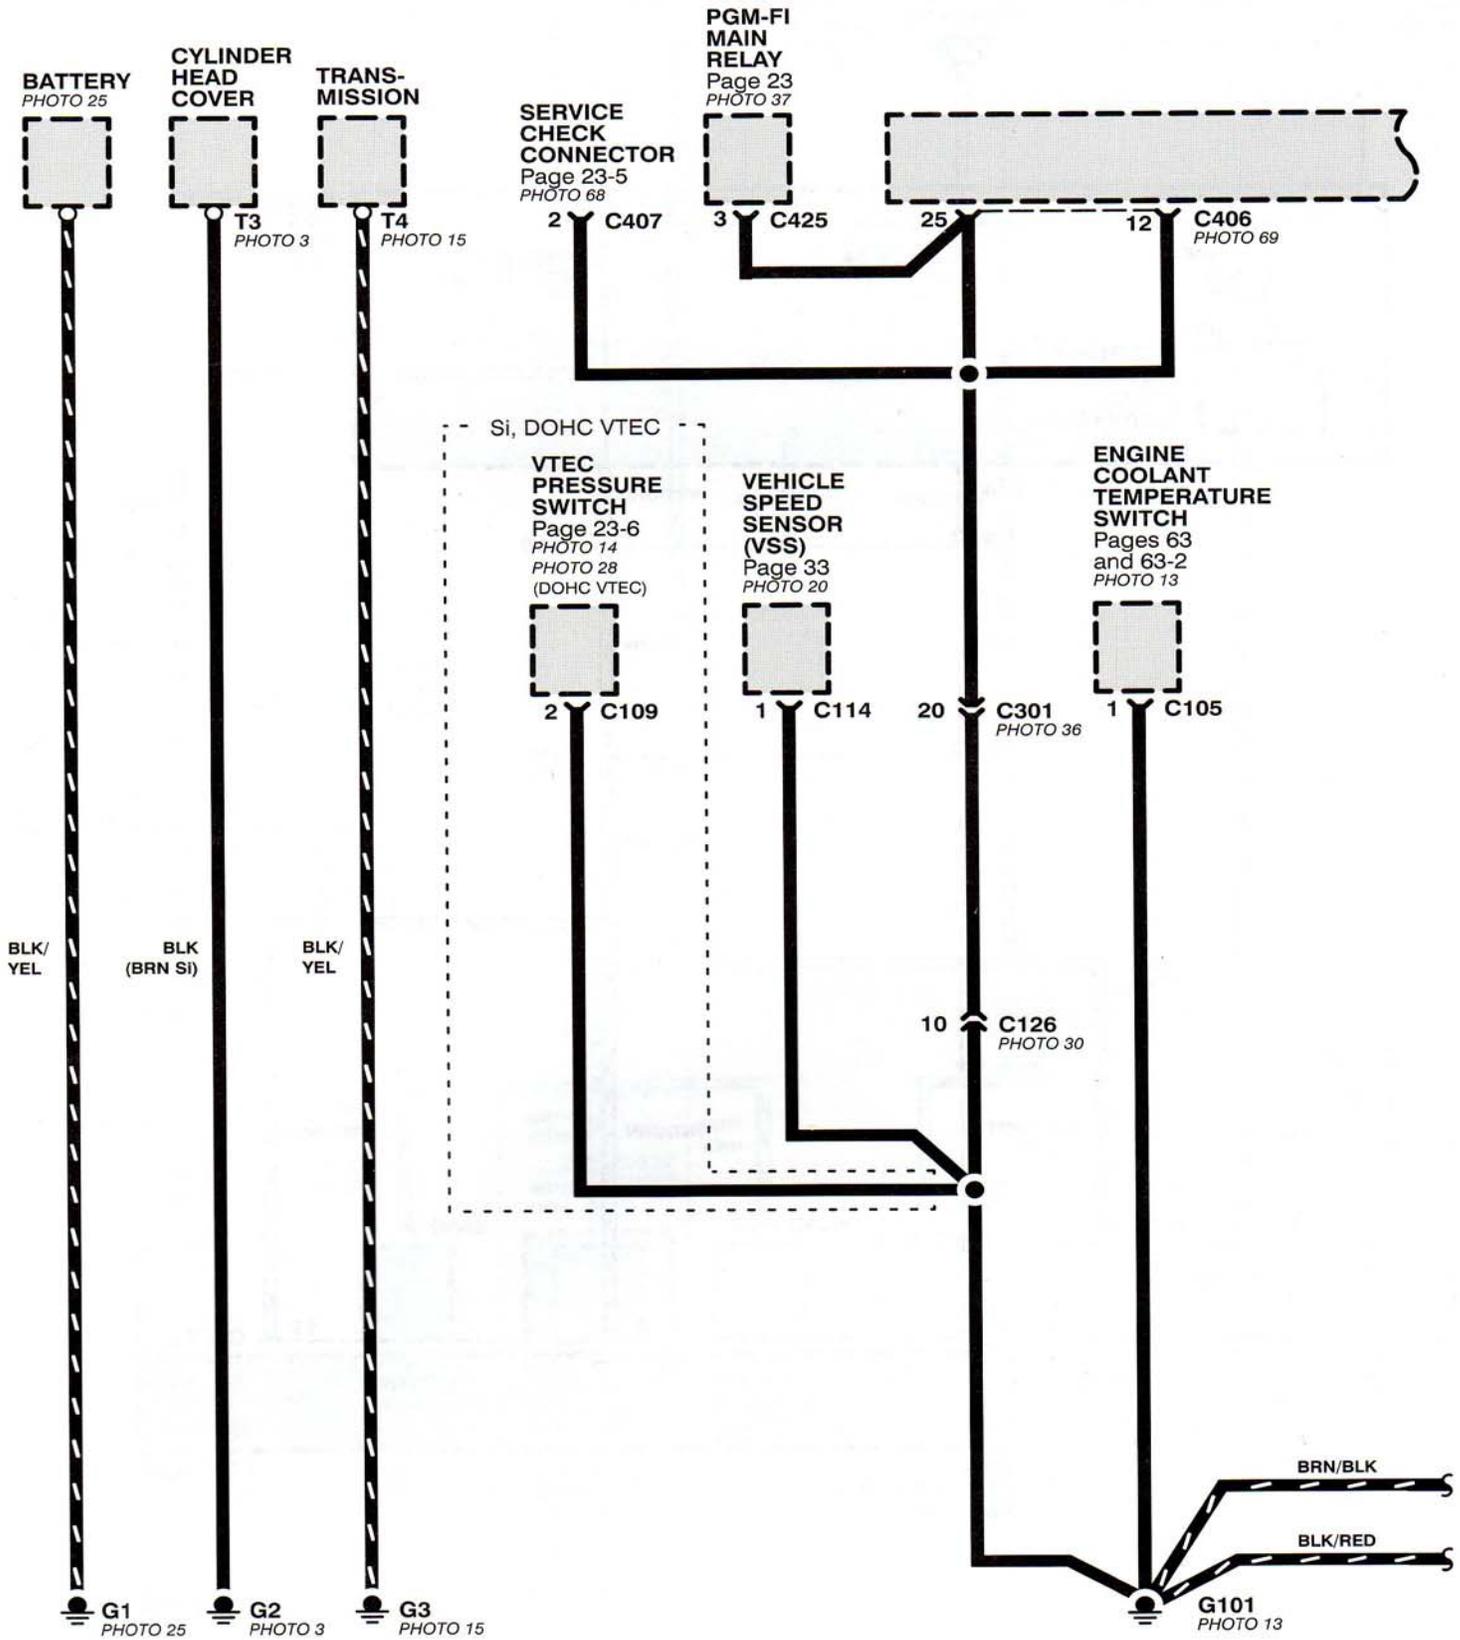



**ENGINE CONTROL
MODULE (ECM)**
Pages 23-2 and 23-3
PHOTO 69


**DATA
LINK
CONNECTOR
(DLC)**
Page 23-6
PHOTO 68

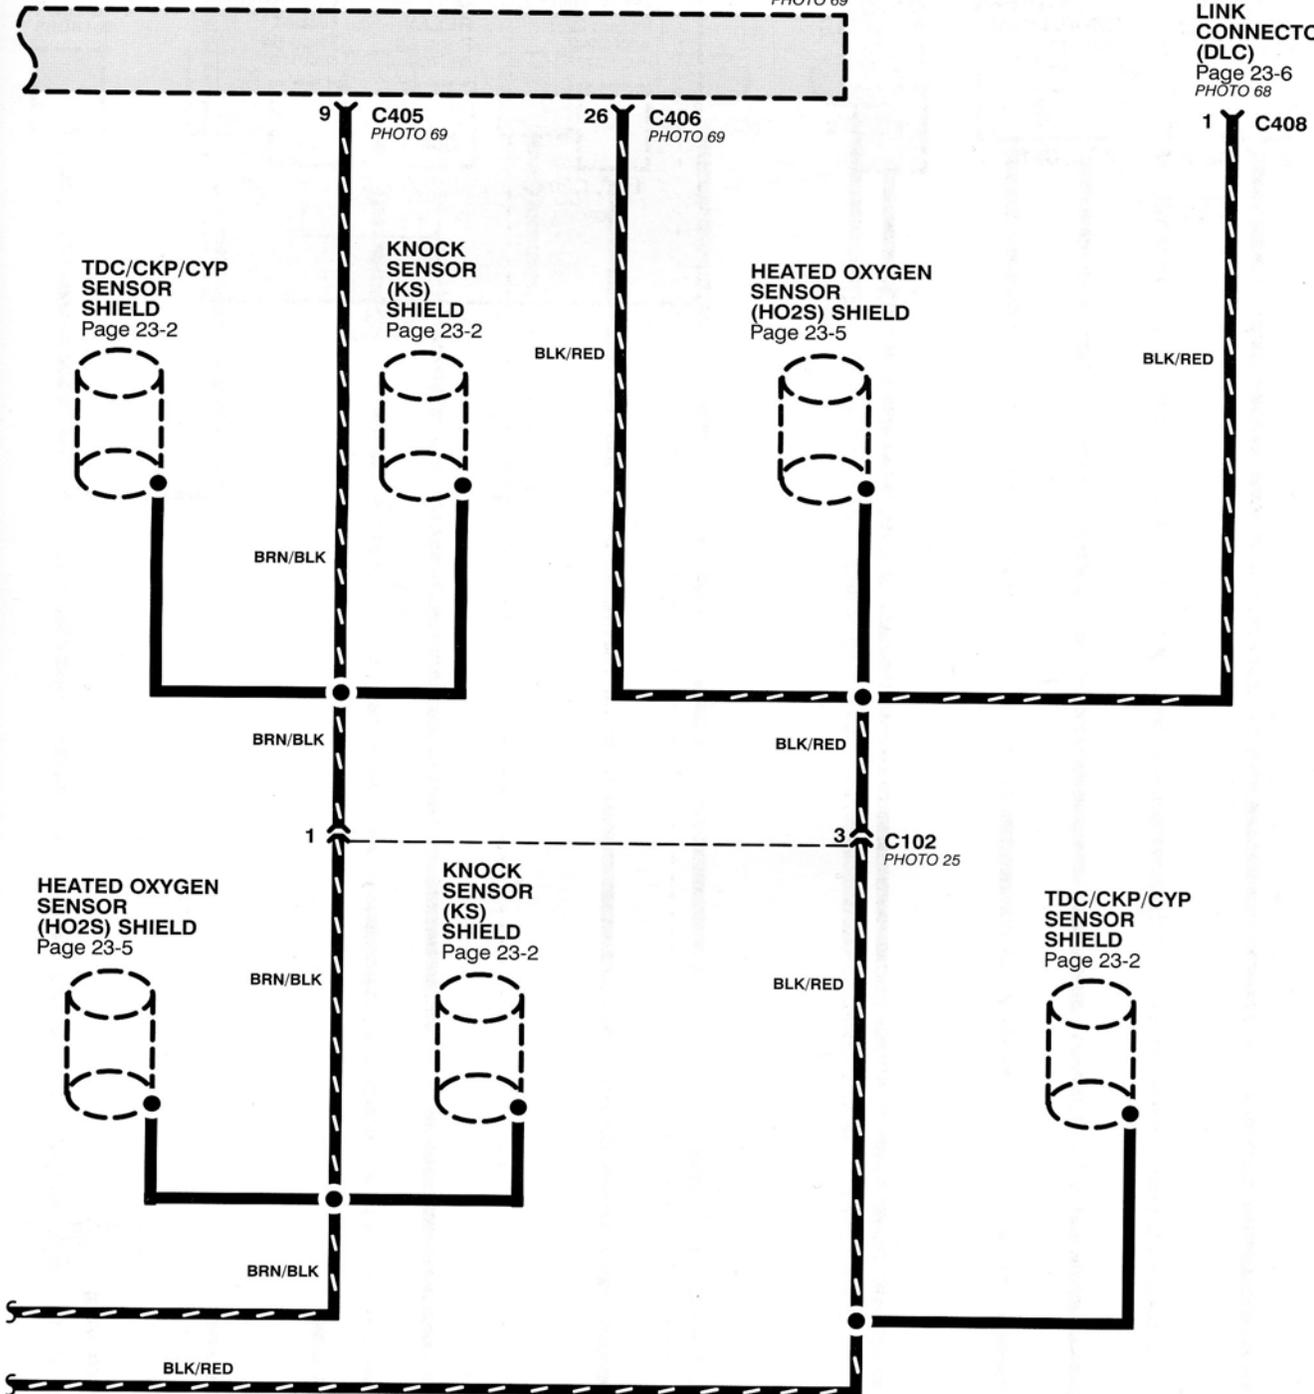

Ground Distribution (cont'd)

- G201


NOTE: Wires shown without color codes are black.

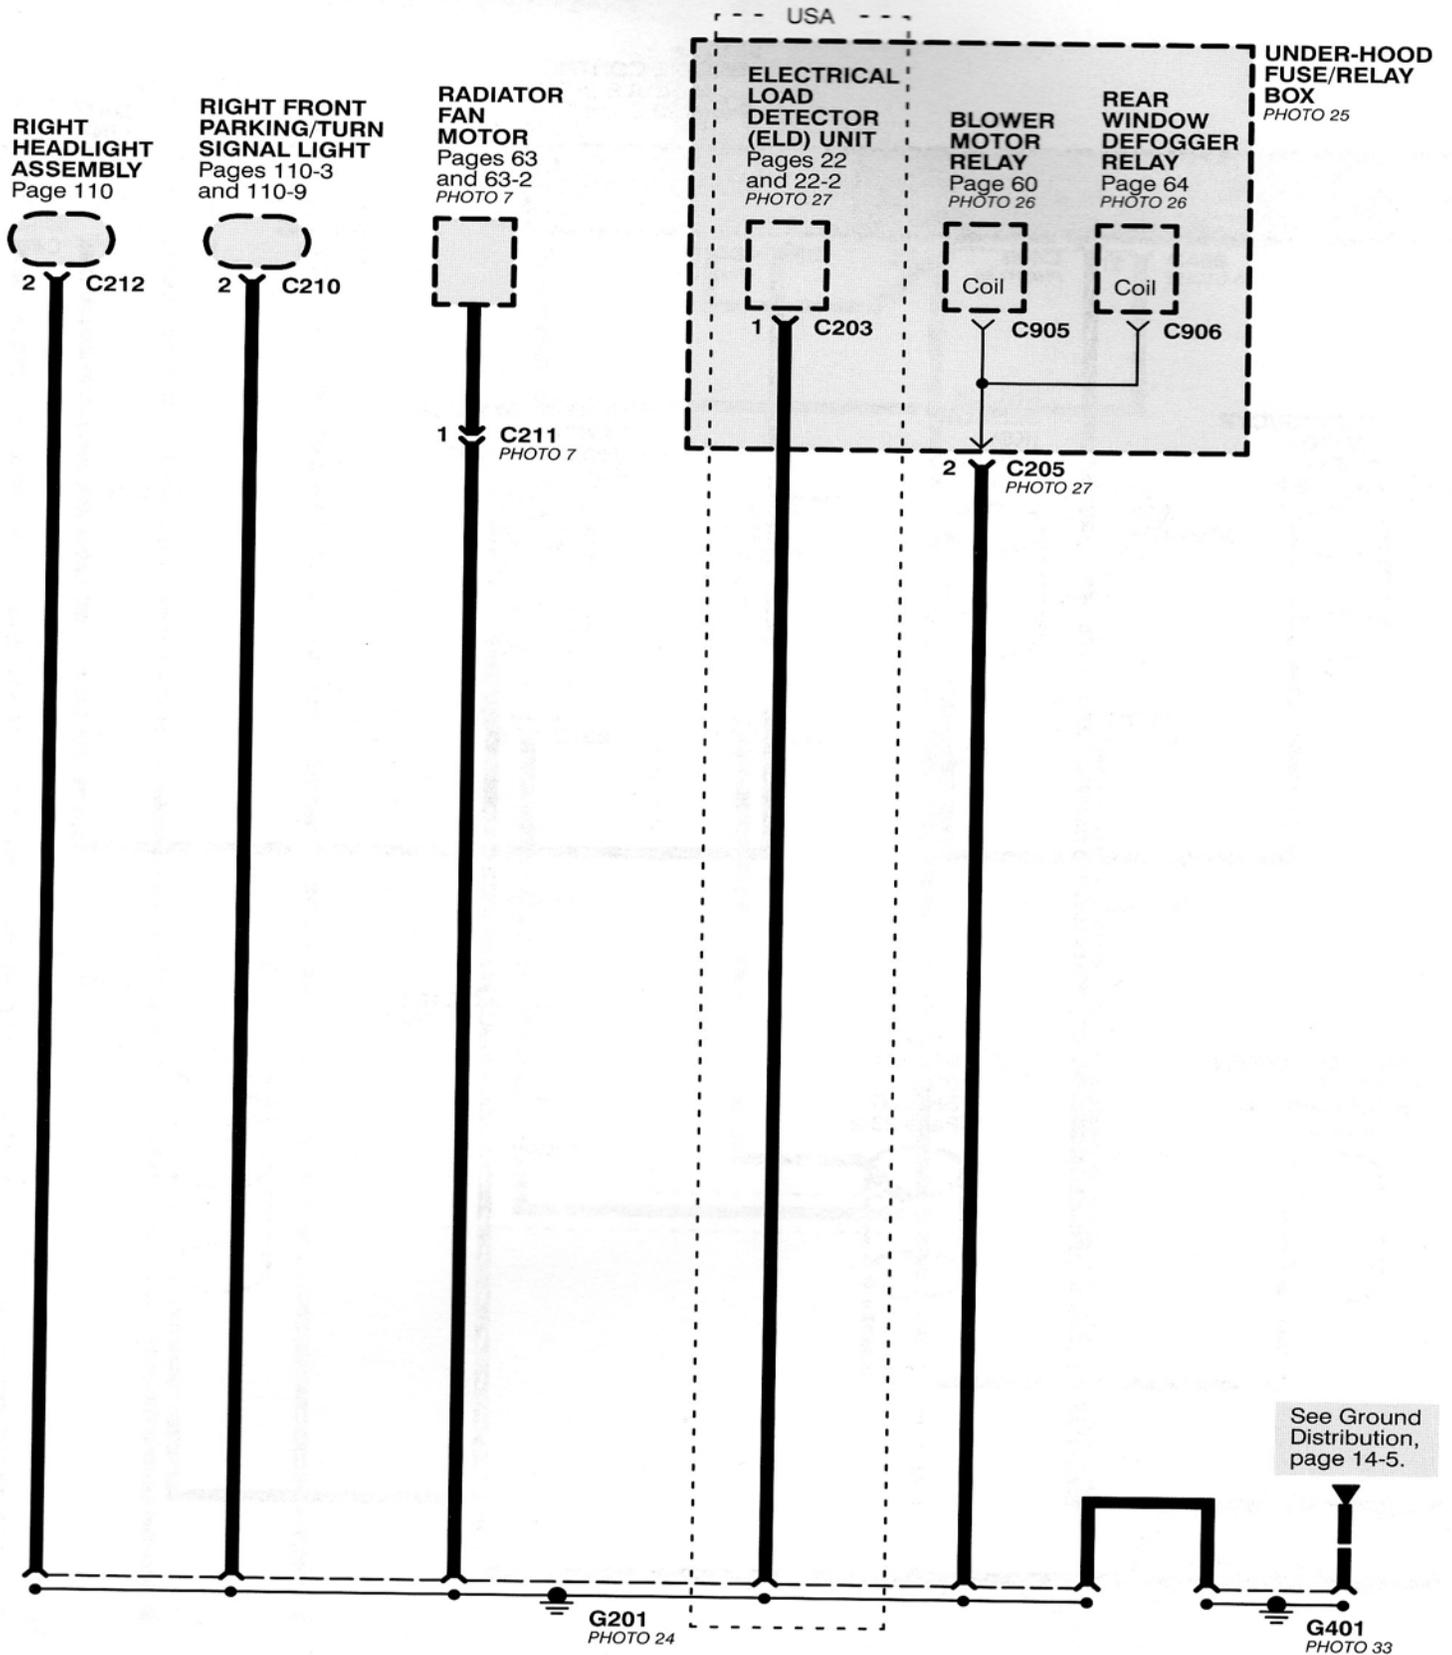



G301


NOTE: Wires shown without color codes are black.


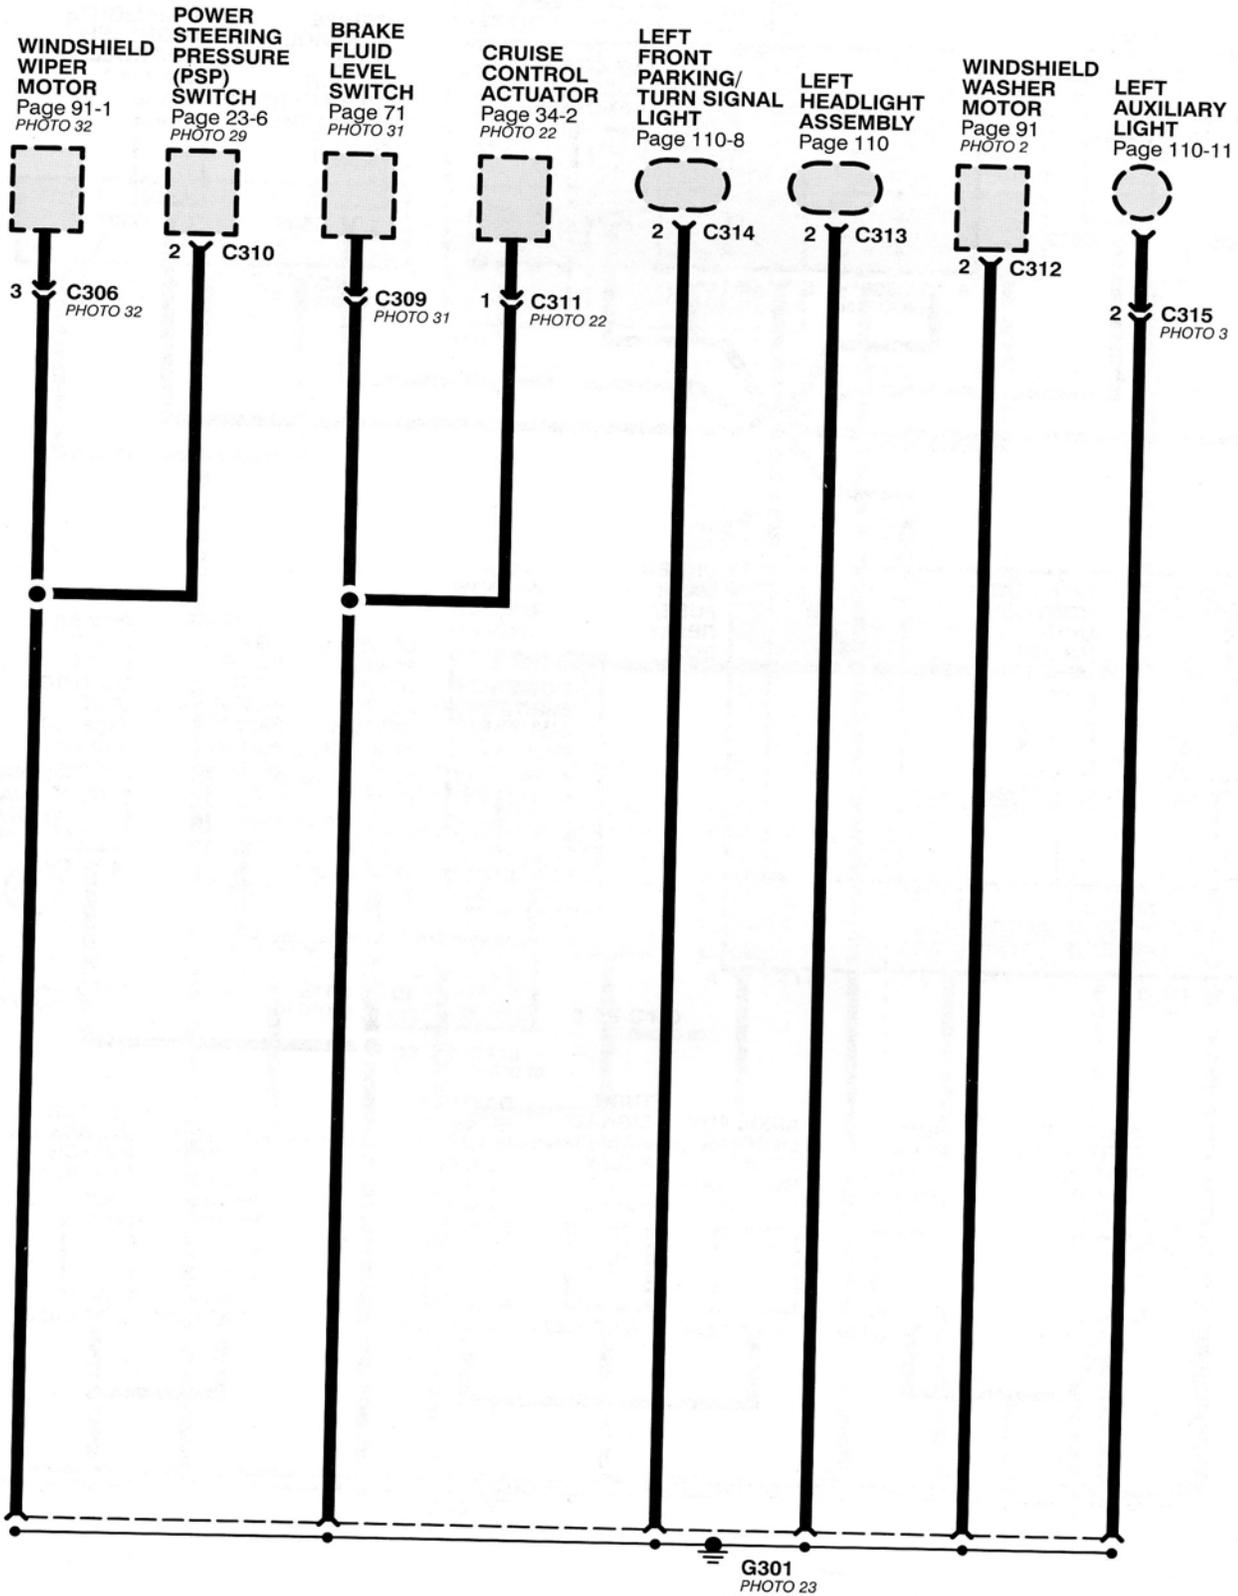


Ground Distribution (cont'd)

G401

 NOTE: Wires shown without color codes are black.

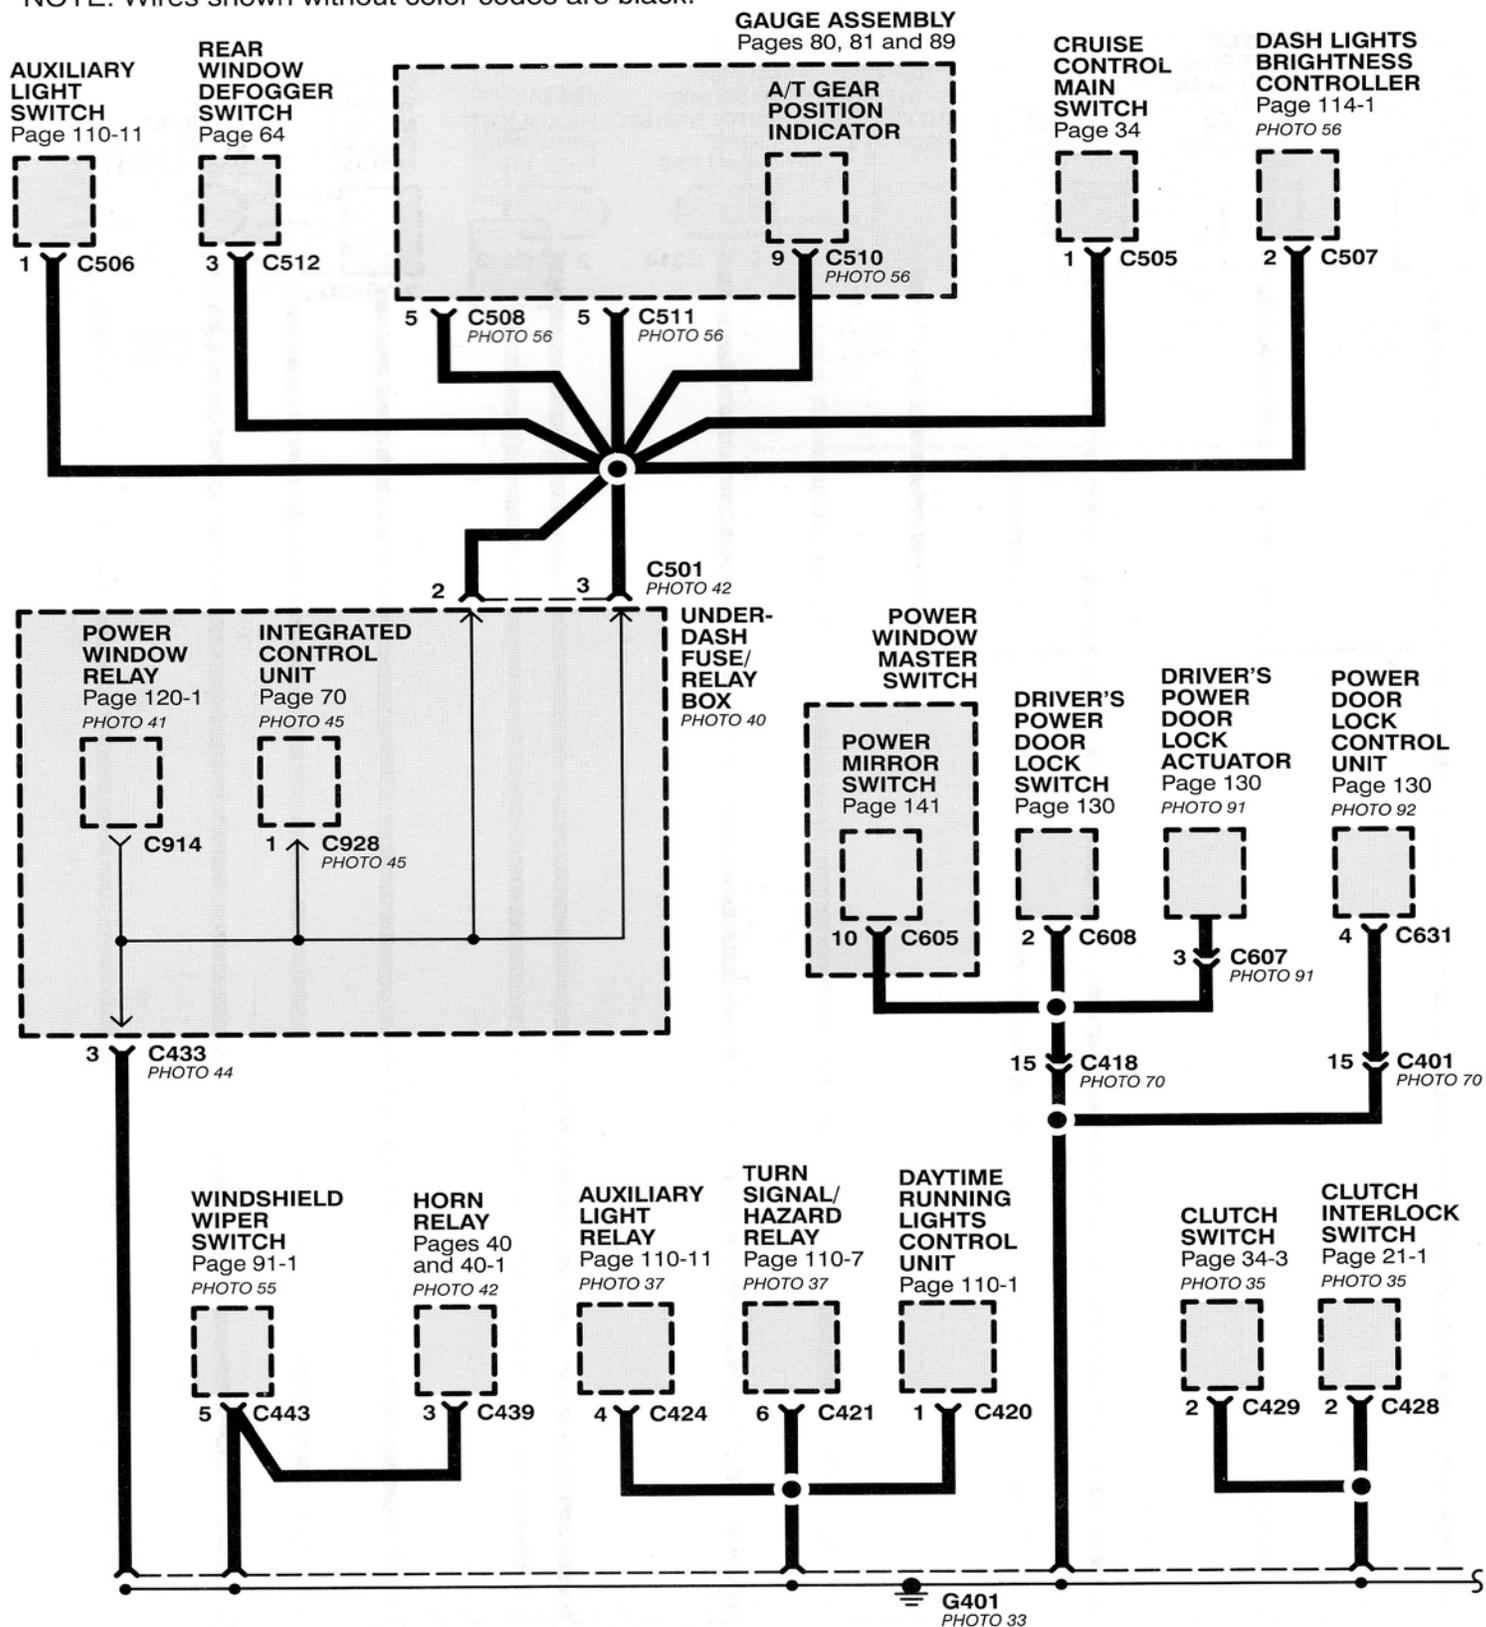


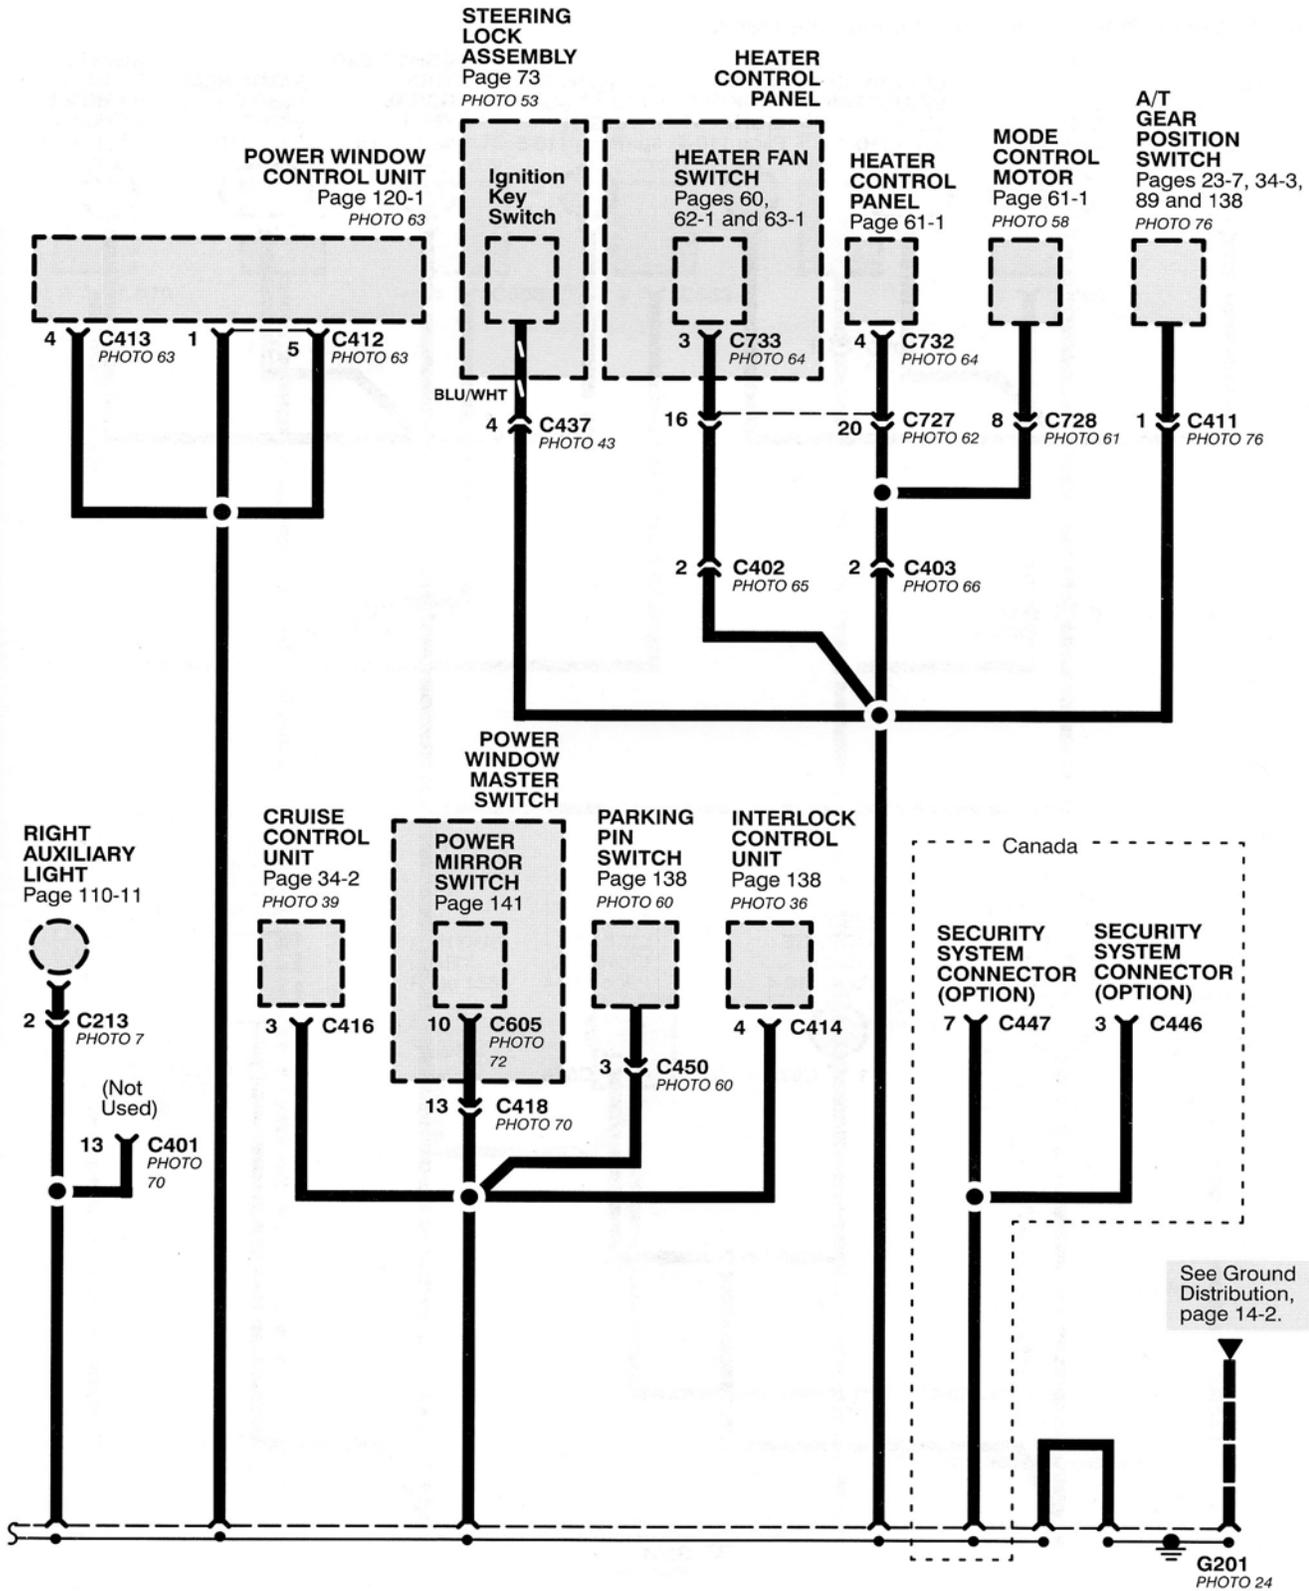


Ground Distribution (cont'd)


- G551

 NOTE: Wires shown without color codes are black.

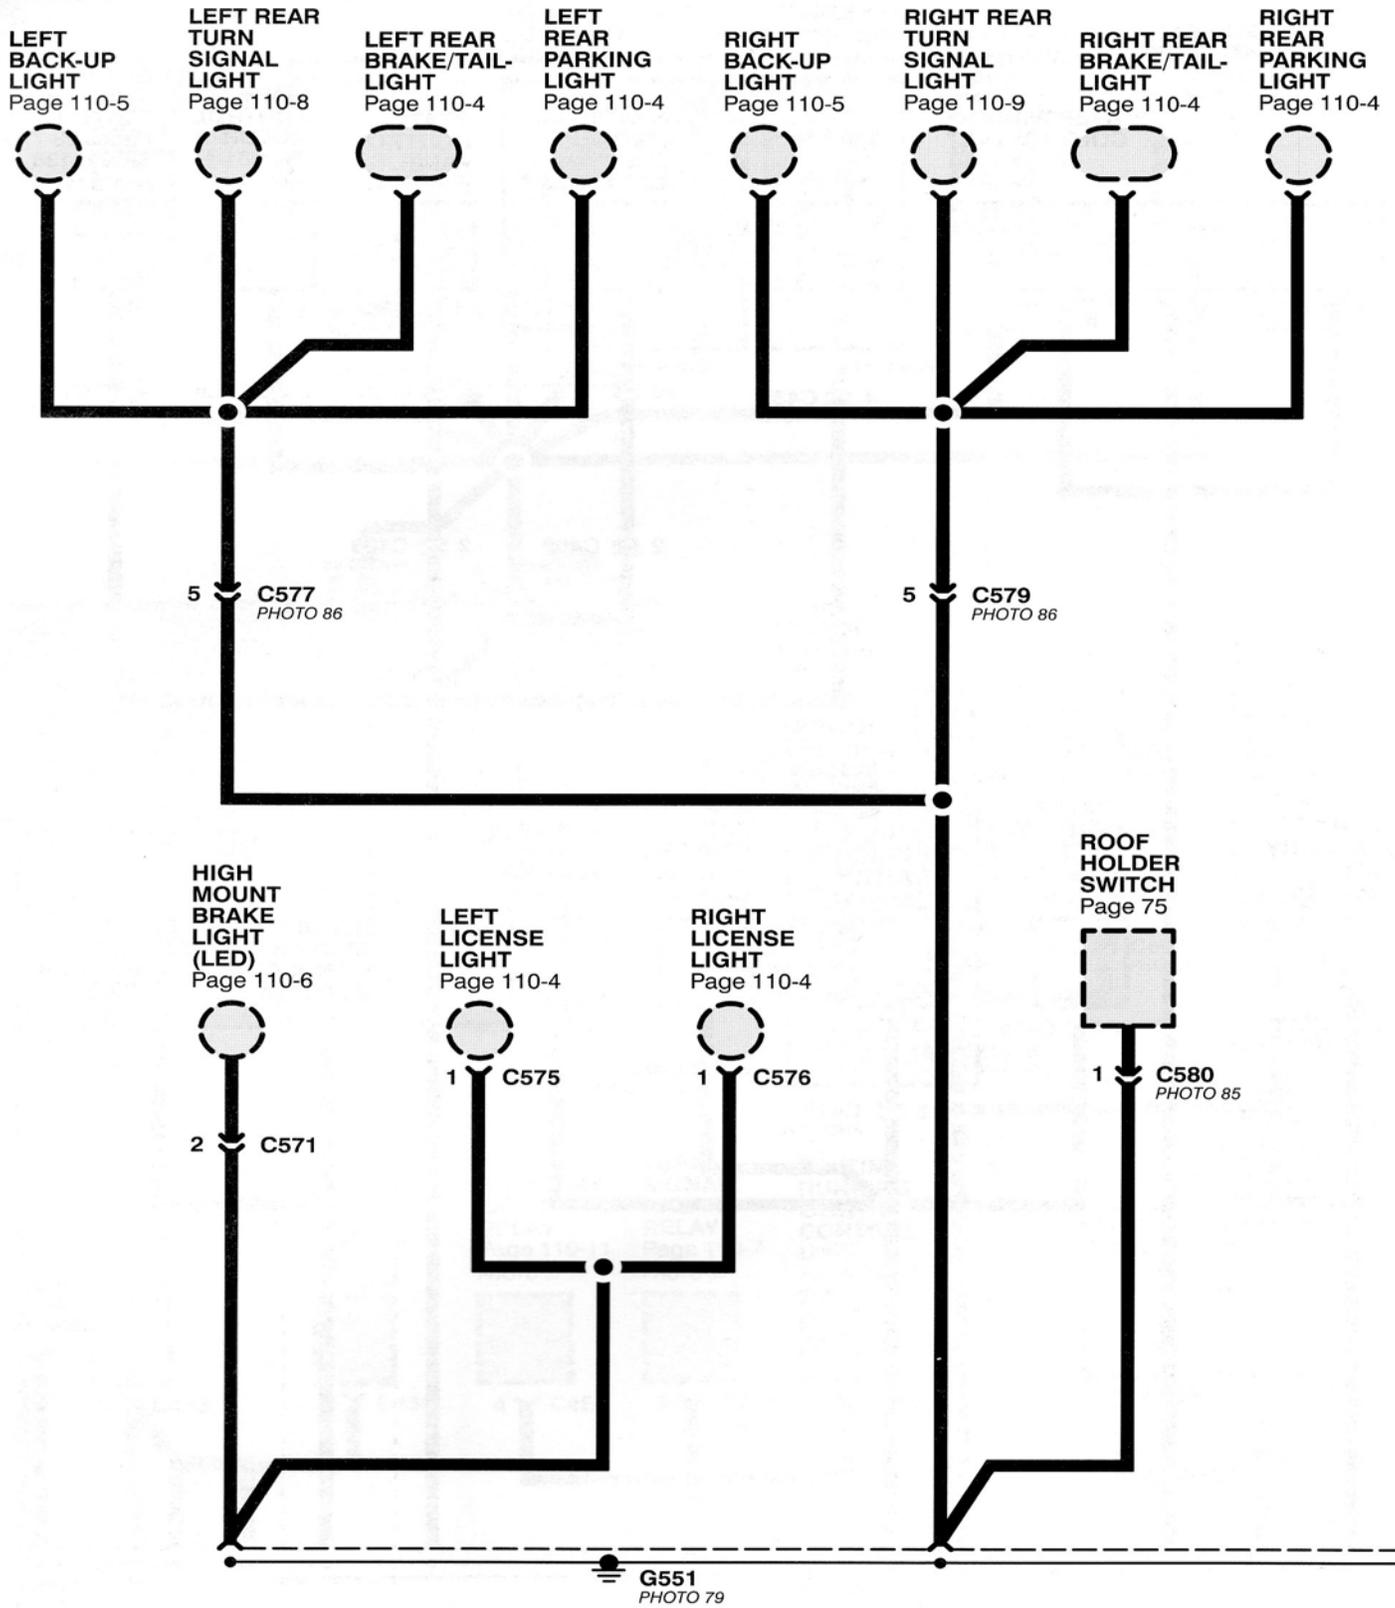






- G551 (cont'd), G552

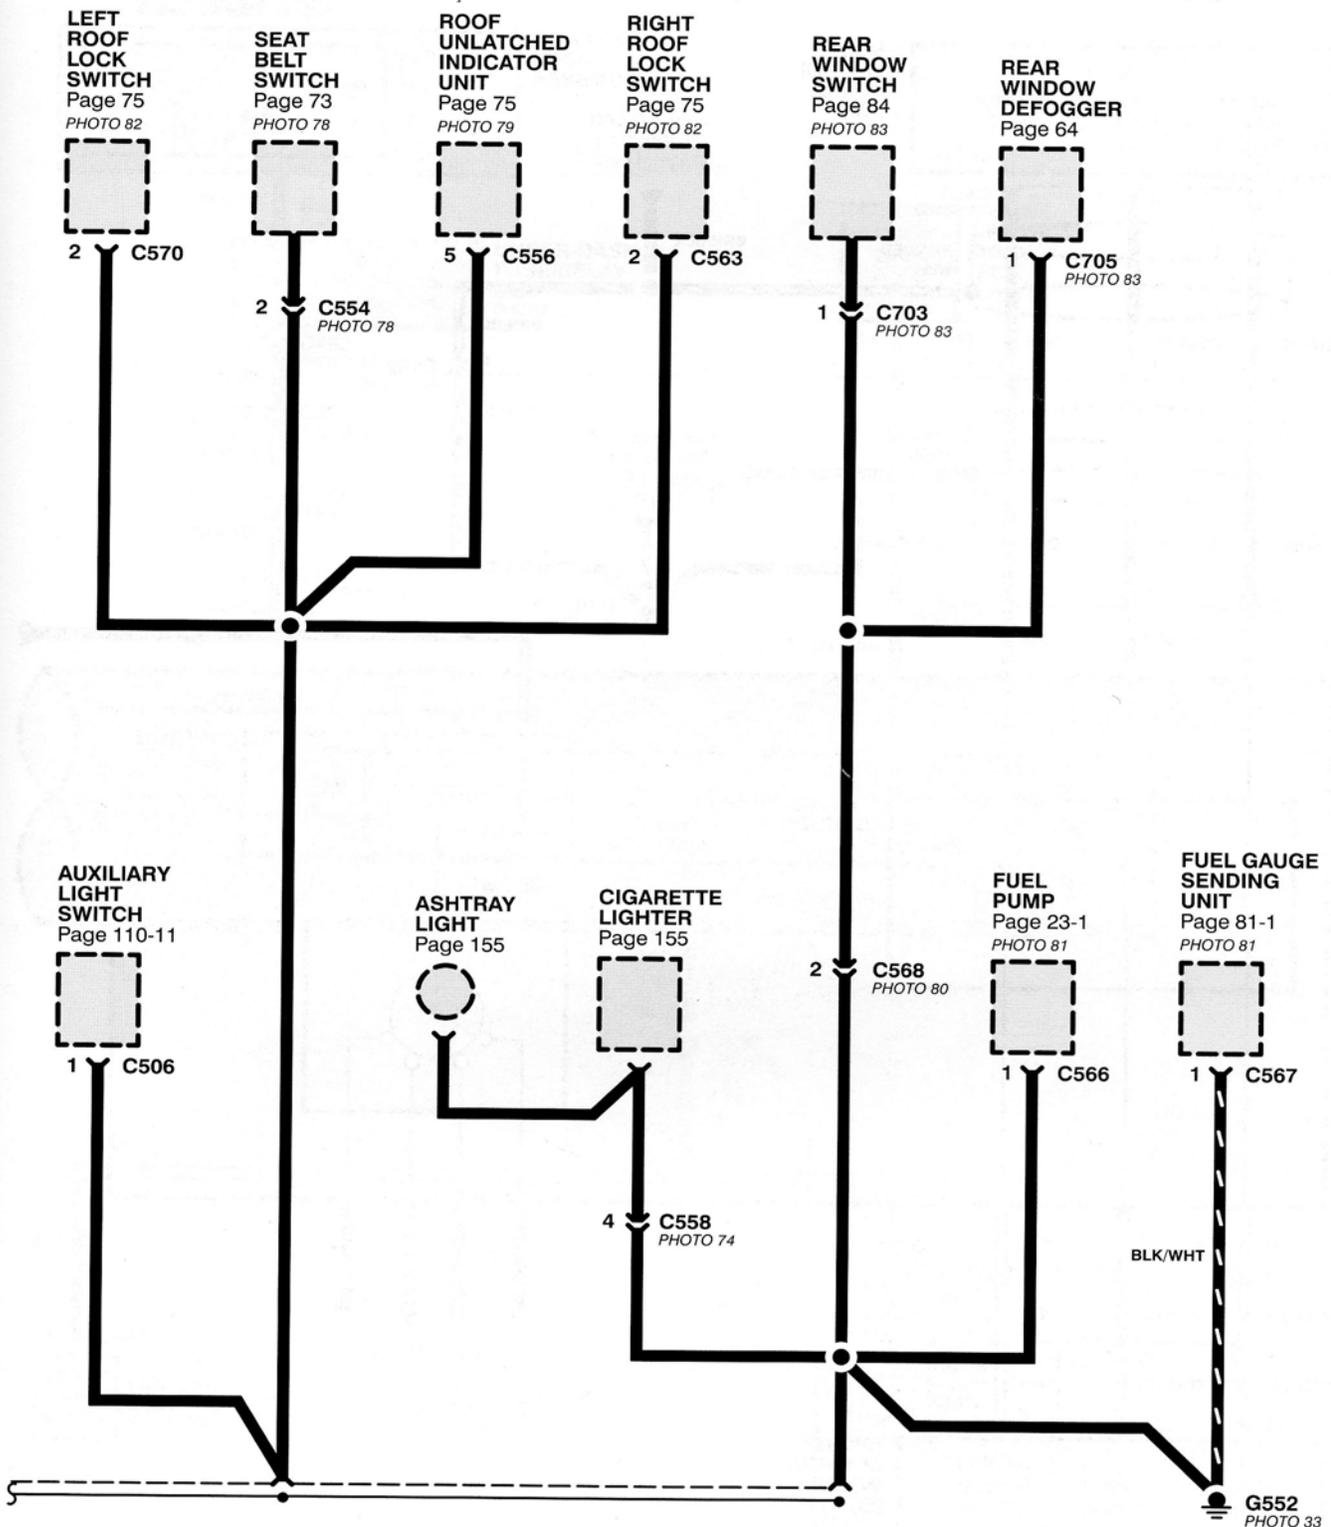

Ignition System

 NOTE: For Service Check Connector details, see page 23-5.

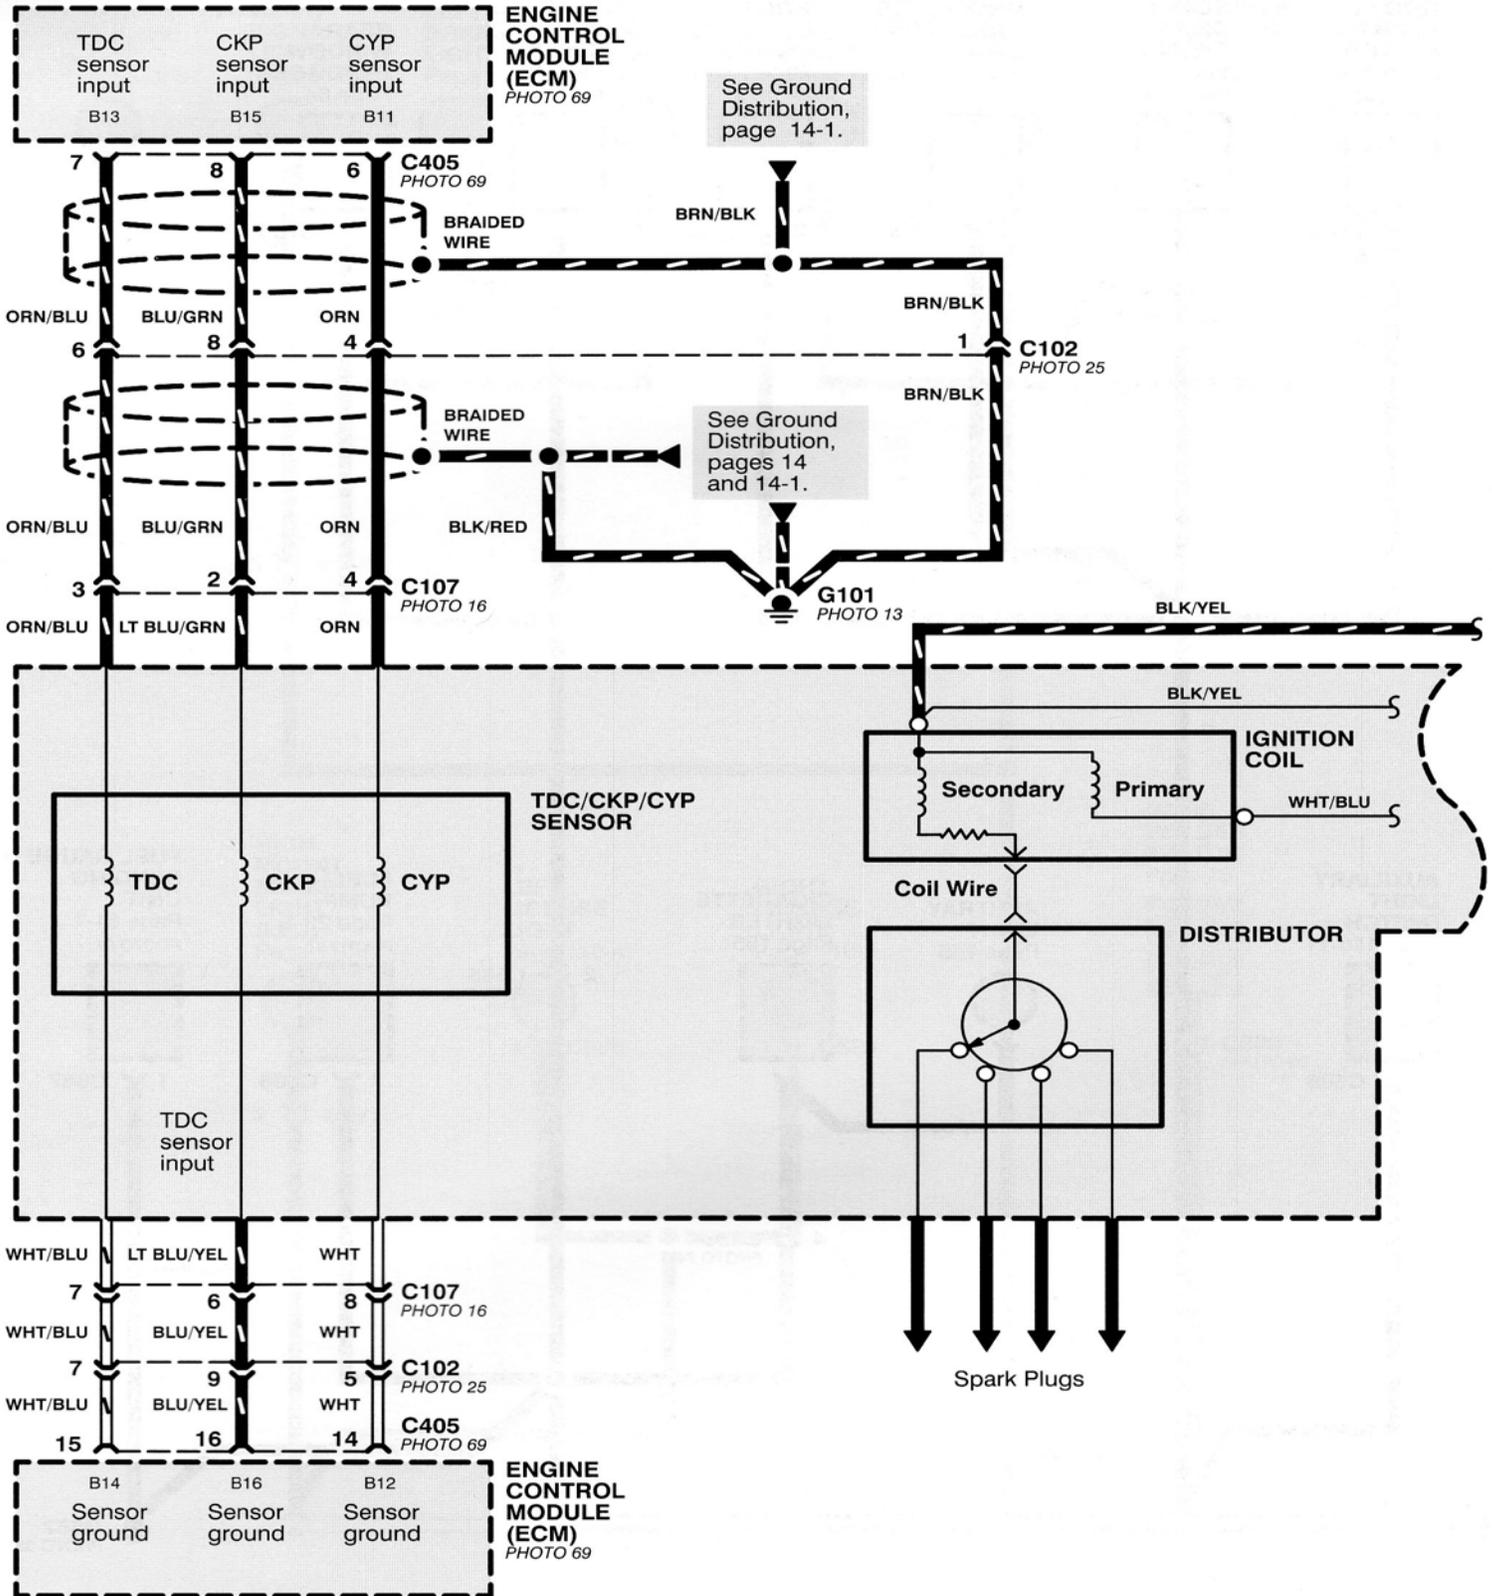

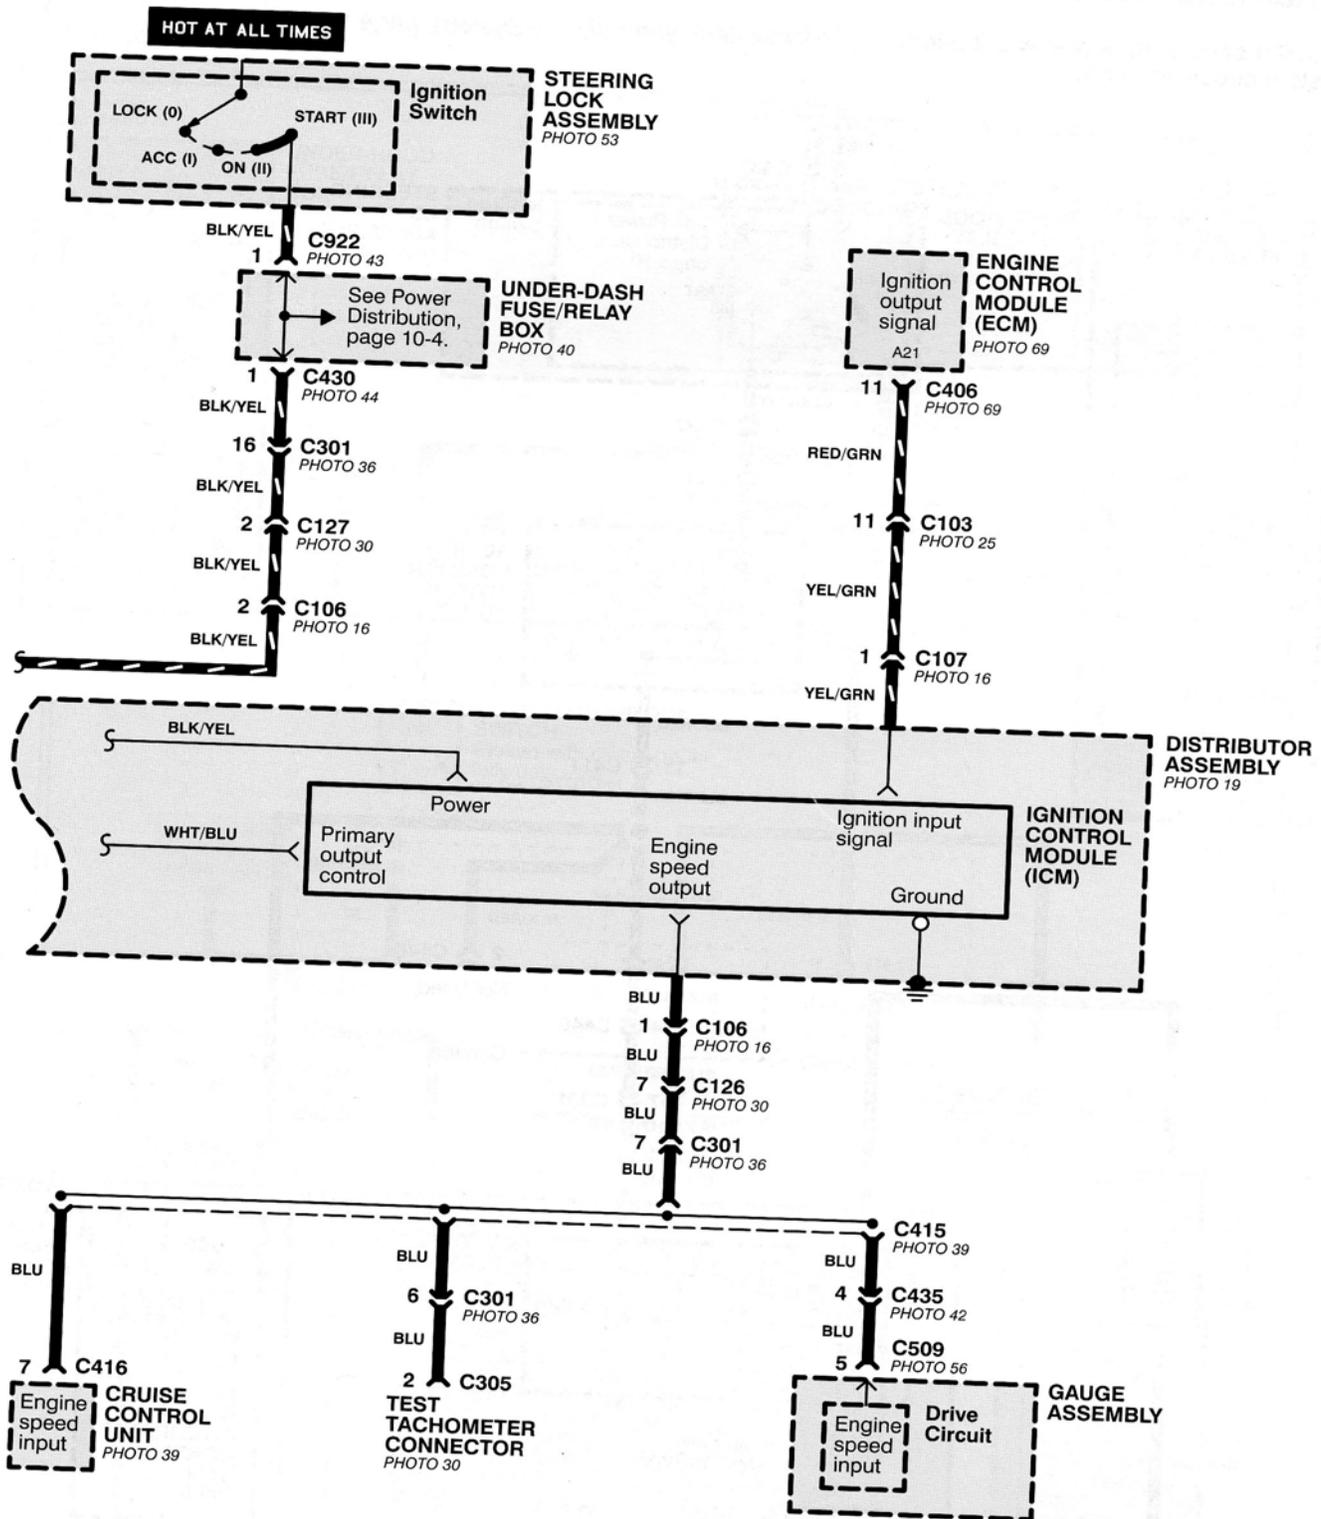

Starting System

- Automatic Transmission

NOTE: For cars equipped with optional security system, see Security System, page 133-3 for starting system circuit schematic.

